

# Index

T1~T19

Index Descriptions of the products described in this book are listed in alphabetic order.

# T

Description	Page	Category
<b>Numeric</b>		
16E% A○○	J12, J14	Insert (Threading)
16E% AG○○	J12, J14	Insert (Threading)
16E% G○○	J12, J14	Insert (Threading)
16E% A○○-TF	J12, J14	Insert (Threading) / TF series
16E% AG○○-TF	J12, J14	Insert (Threading) / TF series
16E% G○○-TF	J12, J14	Insert (Threading) / TF series
16E% ○○BSPT	J10	Insert (Threading)
16E% ○○BSPT-TF	J10	Insert (Threading) / TF series
16E% ○○BSPT-TS	J10	Insert (Threading)
16E% ○○(○)NPT	J10	Insert (Threading)
16E% ○○UN	J8	Insert (Threading)
16E% ○○UN-TF	J8	Insert (Threading) / TF series
16E% ○○W	J8	Insert (Threading)
16E% ○○W-TF	J8	Insert (Threading) / TF series
16E% ○○W-TS	J8	Insert (Threading)
16E% ○○○ISO	J6	Insert (Threading)
16E% ○○○ISO-M02	J6	Insert (Threading)
16E% ○○○ISO-TF	J6	Insert (Threading) / TF series
16E% ○○○ISO-TS	J6	Insert (Threading)
16E% ○○○TR	J14	Insert (Threading)
16E% ○○○○	J12, J14	Insert (Threading)
16E% ○○○○-TS	J12	Insert (Threading)
22E% N○○	J12, J14	Insert (Threading)
22E% ○○UN	J8	Insert (Threading)
22E% ○○○ISO	J6	Insert (Threading)
22E% ○○○TR	J14	Insert (Threading)
06I% ○○○○(○)	J13, J15	Insert (Threading)
08I% ○○○○(○)	J13, J15	Insert (Threading)
11I% A○○	J13, J15	Insert (Threading)
11I% ○○BSPT	J11	Insert (Threading)
11I% ○○BSPT-TF	J11	Insert (Threading) / TF series
11I% ○○BSPT-TS	J11	Insert (Threading)
11I% ○○○ISO	J7	Insert (Threading)
11I% ○○○ISO-TF	J7	Insert (Threading) / TF series
11I% ○○○○	J13, J15	Insert (Threading)
16I% A○○	J13, J15	Insert (Threading)
16I% AG○○	J13, J15	Insert (Threading)
16I% G○○	J13, J15	Insert (Threading)
16I% ○○BSPT	J11	Insert (Threading)
16I% ○○BSPT-TF	J11	Insert (Threading) / TF series
16I% ○○BSPT-TS	J11	Insert (Threading)
16I% ○○(○)NPT	J11	Insert (Threading)
16I% ○○UN	J9	Insert (Threading)
16I% ○○UN-TF	J9	Insert (Threading) / TF series
16I% ○○W	J9	Insert (Threading)
16I% ○○W-TF	J9	Insert (Threading) / TF series
16I% ○○W-TS	J9	Insert (Threading)
16I% ○○○ISO	J7	Insert (Threading)
16I% ○○○ISO-TF	J7	Insert (Threading) / TF series
16I% ○○○ISO-TS	J7	Insert (Threading)
16I% ○○○TR	J15	Insert (Threading)
16I% ○○○○(○)	J13, J15	Insert (Threading)
16I% ○○○○(○)-TS	J13	Insert (Threading)
22I% N○○	J13, J15	Insert (Threading)
22I% ○○UN	J9	Insert (Threading)
22I% ○○○ISO	J7	Insert (Threading)
22I% ○○○TR	J15	Insert (Threading)
2FEKS ○○○-○○-○○	L12	Solid End Mill
2FEKM ○○○-○○-○○	L12	Solid End Mill
2FESL ○○○-○○-○○	L11	Solid End Mill
2FESM ○○○-○○-○○	L10, L11	Solid End Mill
2FESS ○○○-○○-○○	L10	Solid End Mill
2FESW ○○○-○○-○○(A)	L14	Solid End Mill (for Automatic Lathe)
2UEBS ○○○-○○-○○	L26	Solid End Mill
3AESL ○○○-○○-○○	L34	Solid End Mill
3AESM ○○○-○○-○○	L34	Solid End Mill
3FESW ○○○-○○-○○(A)	L14	Solid End Mill (for Automatic Lathe)
3NESM ○○○-○○-○○	L32	Solid End Mill
3NFSL ○○○-○○-○○	L33	Solid End Mill
3UEBS ○○○-○○-○○	L26	Solid End Mill
3UFSM ○○○-○○-○○	L15	Solid End Mill
3ZFKM ○○○-○○-○○	L19	Solid End Mill
3ZFKS ○○○-○○-○○	L19	Solid End Mill
4FEKM ○○○-○○-○○	L13	Solid End Mill

Description	Page	Category
4FESM ○○○-○○-○○	L13	Solid End Mill
4FESW ○○○-○○-○○	L14	Solid End Mill (for Automatic Lathe)
4MFK ○○○-○○	L21	Solid End Mill
4PGRM ○○○-○○-○○-R○○○	L17	Solid End Mill
4YEBM ○○○-○○-○○	L27	Solid End Mill
4YECM ○○○-○○-○○-C○○	L22	Solid End Mill
4YEKM ○○○-○○-○○	L22	Solid End Mill
4YERM ○○○-○○-○○-R○○○	L22	Solid End Mill
5DEKM ○○○-○○-○○	L23	Solid End Mill
5DERM ○○○-○○-○○-R○○○	L23	Solid End Mill
6PDRS ○○○-○○-○○	L28	Solid End Mill
○HFMS ○○○-○○-○○	L30	Solid End Mill
○HFSS ○○○-○○-○○	L30	Solid End Mill
○NFSM ○○○-○○-○○	L33	Solid End Mill
○PGSL ○○○-○○-○○	L16	Solid End Mill
○PGSM ○○○-○○-○○	L16	Solid End Mill
○PGSS ○○○-○○-○○	L16	Solid End Mill
○RDSL ○○○-○○-○○	L24	Solid End Mill
○RDSM ○○○-○○-○○	L24	Solid End Mill
○RFRS ○○○-○○-○○-R○○○	L25	Solid End Mill
○RFSM ○○○-○○-○○	L25	Solid End Mill
○UGSM ○○○-○○-○○	L31	Solid End Mill
○YFSM ○○○-○○-○○	L23	Solid End Mill
556C%L	D23, P8	Spare Parts (Shim)
<b>A</b>		
A63-WH- C○○-○○(○)	N10	Toolholder (HSK Tooling / Previous Description)
A63-WH- KGBA%L-16	N9	Grooving (HSK Tooling / Previous Description)
A63-WH- KGBA%L-22-○○	N9	Grooving (HSK Tooling / Previous Description)
A63-WH- KTNR-○○	N9	Threading (HSK Tooling / Previous Description)
A63-WH- N○○-○○(○)	N10	Toolholder (HSK Tooling / Previous Description)
A63-WH- PCLN%L-DX12	N5	Toolholder (HSK Tooling / Previous Description)
A63-WH- PCMNN-□12	N5	Toolholder (HSK Tooling / Previous Description)
A63-WH- PDJN%L-DX15	N5	Toolholder (HSK Tooling / Previous Description)
A63-WH- PDNNN-□15	N6	Toolholder (HSK Tooling / Previous Description)
A63-WH- PTGN%L-DX16	N6	Toolholder (HSK Tooling / Previous Description)
A63-WH- PWLN%L-DX08	N7	Toolholder (HSK Tooling / Previous Description)
A63-WH- S2525%L-105	N3	Toolholder (HSK Tooling / Previous Description)
A63-WH- WTENN-□16	N6	Toolholder (HSK Tooling / Previous Description)
A63-WH- WWMNN-□08	N7	Toolholder (HSK Tooling / Previous Description)
A○○□- PCLN%○○-○○	F76	Boring Bars
A○○□- PDUN%○○-○○	F77	Boring Bars
A○○□- PTUN%○○-○○	F78	Boring Bars
A○○□- PWLN%○○-○○	F79	Boring Bars
A○○□- SCLC%○○-○○	F96	Boring Bars
A○○□- SCLC%○○-○○AE	F35	Boring Bars (Dynamic Bar)
A○○□- SCLC%○○-○○E	F37, F95	Boring Bars
A○○□- SCLP%○○-○○AE	F39	Boring Bars (Dynamic Bar)
A○○□- SCLP%○○-○○E	F41, F95	Boring Bars
A○○□- SDQC%○○-○○AE	F44	Boring Bars (Dynamic Bar)
A○○□- SDUC%○○-○○AE	F43	Boring Bars (Dynamic Bar)
A○○□- SDZC%○○-○○AE	F45	Boring Bars (Dynamic Bar)
A○○□- STLC%○○-○○AE	F49	Boring Bars (Dynamic Bar)
A○○□- STLP%○○-○○AE	F51	Boring Bars (Dynamic Bar)
A○○□- STUP%○○-○○E	F54, F95	Boring Bars
A○○□- SVJB%○○-○○AE	F59	Boring Bars (Dynamic Bar)
A○○□- SVJC%○○-○○AE	F59	Boring Bars (Dynamic Bar)
A○○□- SVJP%○○-○○AE	F59	Boring Bars (Dynamic Bar)
A○○□- SVPB%○○-○○AE	F59	Boring Bars (Dynamic Bar)
A○○□- SVPC%○○-○○AE	F59	Boring Bars (Dynamic Bar)
A○○□- SVUB%○○-○○AE	F61	Boring Bars (Dynamic Bar)
A○○□- SVUC%○○-○○AE	F61	Boring Bars (Dynamic Bar)
A○○□- SVZB%○○-○○AE	F61	Boring Bars (Dynamic Bar)
A○○□- SVZC%○○-○○AE	F61	Boring Bars (Dynamic Bar)
A○○□- SWUB%○○-○○AE	F65	Boring Bars (Dynamic Bar)
A○○□- SWUP%○○-○○AE	F65	Boring Bars (Dynamic Bar)
A○○□- SWUP%○○-○○E	F96	Boring Bars
AABSR ○○○○□(□)-○○F	E17, E46	Toolholder (Turning)
AABWR ○○○○□(□)-○○F	E18, E19, E46	Toolholder (Turning)
ABS ○○R○○○○	B76	Insert (Turning)
ABS ○○R○○○○M	B76	Insert (Turning)
ABW ○○R○○○○	B76	Insert (Turning)
ABW ○○R○○○○M	B76	Insert (Turning)
ACLCL%L ○○○○□(□)-○○FF	E46	Toolholder (Turning)
ACLCL%L ○○○○□(□)-○○FF	E22	Toolholder (Turning)
AD○○□	F75	Boring Bars (AD Bar Adaptor)

T

?

Index

Description	Page	Category
ADJC% 0000□-00F	E46	Toolholder (Turning)
ADJC% 0000□□-00FF	E24	Toolholder (Turning)
ADNCR 0000□-00F	E46	Toolholder (Turning)
AJ- 0x00(-0.0)	K11, P2	Spare Parts (Adjusting screw / Chamfering Attachment)
AJ-412	M30	Spare Parts (Adjusting screw)
AP-1416	M136, M137	Spare Parts (Cam Pin)
AP-1820	M136, M137	Spare Parts (Cam Pin)
APMT 000000E%-NB○	M18	Insert (Milling)
APMT 000000ER-NB○P	M18	Insert (Milling)
AVJB% 0000□-00F	E46	Toolholder (Turning)
AVJB% 0000□□-00FF	E30	Toolholder (Turning)
AVVB% 0000□-00F	E46	Toolholder (Turning)
<b>B</b>		
BCS -○	H23, P13	Spare Parts (Clamp Set)
BDGT 000000FR-JA	M18	Insert (Milling)
BDMT 000000ER-JS	M18	Insert (Milling)
BDMT 000000ER-JT	M18, M19	Insert (Milling)
BDMT 000000ER-N○	M19	Insert (Milling)
BDMT 000000FR	C32, M22	Insert (Milling)
BGIAR ○○-○	G64	Blade (Grooving)
BH3X6	F83, P2	Spare Parts (Screw)
BH3X12	D33, D34, D35, P2	Spare Parts (Screw)
BH6X10TR	G29, G77, P2	Spare Parts (Screw)
BH6X25	G15, P2	Spare Parts (Screw)
BH8X30	G19, P2	Spare Parts (Screw)
<b>C</b>		
000□- SCLC%00-00	F36, F97	Boring Bars
000□- SCLC%00-00A	F35	Boring Bars (Dynamic Bar)
000□- SCLC%00-00-AS	F94	Boring Bars (Assembly (AS))
000□- SCLP%00-00	F41, F97	Boring Bars
000□- SCLP%00-00-0/0	F41, F97	Boring Bars
000□- SDUC%00-00	F46, F97	Boring Bars
000□- SJLC%00-000	F48	Boring Bars
000□- SJZC%00-000	F48	Boring Bars
000□- STLB%00-00A	F51	Boring Bars (Dynamic Bar)
000□- STUB%00-00	F53, F97	Boring Bars
000□- STUP%00-00	F53, F97, F98	Boring Bars
000□- STUP%00-00-0/0	F53, F97, F98	Boring Bars
000□- STUPR00-00-AS	F94	Boring Bars (Assembly (AS))
000□- STXB%00-000	F56	Boring Bars
000□- STXP%00-00	F56	Boring Bars
000□- STZB%00-000	F56	Boring Bars
000□- SWUB%00-00	F67, F98	Boring Bars
000□- SWUB%00-00A	F65	Boring Bars (Dynamic Bar)
000□- SWUB%00-00-AS	F94	Boring Bars (Assembly (AS))
000□- SWUB%00-00-0/0	F67, F98	Boring Bars
000□- SWUP%00-00	F67, F98	Boring Bars
000□- SWUP%00-00-0/0	F67, F98	Boring Bars
C17R	M59, P15	Spare Parts (Clamp)
C20R	M37, P15	Spare Parts (Clamp)
C25R	M45, P15	Spare Parts (Clamp)
C43R	M34	Spare Parts (Clamp)
C44R	M34	Spare Parts (Clamp)
C90SD 0000-12%	M136, M137	Spare Parts (Cartridge)
C90SP 0000-10%	M136, M137	Spare Parts (Cartridge)
C91R	M58	Spare Parts (Clamp)
C92R	M58	Spare Parts (Clamp)
CB-11	D25, D34, D35, P16	Spare Parts (Chipbreaker)
CB-12	D26, F81, P16	Spare Parts (Chipbreaker)
CB-13	D26, F81, P16	Spare Parts (Chipbreaker)
CB-14	D23, P16	Spare Parts (Chipbreaker)
CB-15	D23, P16	Spare Parts (Chipbreaker)
CB-16	D22, D23, F81, P16	Spare Parts (Chipbreaker)
CB-17	D22, P16	Spare Parts (Chipbreaker)
CB-51	D25, P16	Spare Parts (Chipbreaker)
CB-S3220	E42, P16	Spare Parts (Chipbreaker)
CB-S4220	E42, P16	Spare Parts (Chipbreaker)
CBSN% 0000□-00	D38	Toolholder (Turning)
CBSN% 0000B-12-A20	F71	Boring Bar (for Bearing Machining)
CB-T2212	E43, P16	Spare Parts (Chipbreaker)
CB-T3220	E43, P16	Spare Parts (Chipbreaker)

Description	Page	Category
CCET 000000(○)F%-USF	B48	Insert (Turning)
CCET 000000(○)M%-F	B47	Insert (Turning)
CCET 000000(○)MF%-J	B49	Insert (Turning)
CCET 000000(○)MF%-U	B48	Insert (Turning)
CCET 000000(○)MF%-USF	B48	Insert (Turning)
CCET 000000(○)M%-FSF	B47	Insert (Turning)
CCET 000000(○)%-FSF	B47	Insert (Turning)
CCGT 000000	B46	Insert (Turning)
CCGT 000000AH	B49	Insert (Turning)
CCGT 000000E%-U	B49	Insert (Turning)
CCGT 000000(○)F%-U	B48	Insert (Turning)
CCGT 000000(○)M	B46	Insert (Turning)
CCGT 000000M-CF	B45	Insert (Turning)
CCGT 000000MP-CF	B45	Insert (Turning)
CCGT 000000ME%-U	B49	Insert (Turning)
CCGT 000000(○)MF	B46	Insert (Turning)
CCGT 000000MF-GF	B45	Insert (Turning)
CCGT 000000MFP-GF	B45	Insert (Turning)
CCGT 000000MF-GQ	B45	Insert (Turning)
CCGT 000000MFP-GQ	B45	Insert (Turning)
CCGT 000000(○)MF%-U	B48	Insert (Turning)
CCGT 000000(○)M%-F	B47	Insert (Turning)
CCGT 000000%-A3	B49	Insert (Turning)
CCGT 000000(○)%-F	B47	Insert (Turning)
CCGW 000000	B49, C21	Insert (Turning)
CCGW 000000NE	C21	Insert (Turning)
CCGW 000000SE	C21	Insert (Turning)
CCLN% 0000□-00	D22	Toolholder (Turning)
CCLN% 0000□-00A	D32	Toolholder (Turning)
CCLN% 0000B-00A	F83	Boring Bar / Previous Description
CCLN% 0000□-00GX	D28	Toolholder (Turning)
CCMT 000000	B46, C21	Insert (Turning)
CCMT 000000GK	B46	Insert (Turning)
CCMT 000000HQ	B46	Insert (Turning)
CCMT 000000MQ	B46	Insert (Turning)
CCMT 000000NE	C21	Insert (Turning)
CCMT 000000SE	C21	Insert (Turning)
CCMW 000000ME	C12	Insert (Turning) / Previous Description
CCMW 000000SE	C12	Insert (Turning) / Previous Description
CCMW 000000SE-T	C12	Insert (Turning) / Previous Description
CCMW 000000S00000MES	C12	Insert (Turning)
CCMW 000000S00000SET	C12	Insert (Turning)
CCMW 000000T00000ME	C12	Insert (Turning)
CCMW 000000T00000SE	C12	Insert (Turning)
CCMW 00T00000ME	C12	Insert (Turning) / Previous Description
CCMW 00T00000ME-T	C12	Insert (Turning) / Previous Description
CCMW 00T00000SE	C12	Insert (Turning) / Previous Description
CCMW 00T00000SE-T	C12	Insert (Turning) / Previous Description
CCMW 00T00000S00000MES	C12	Insert (Turning)
CCMW 00T00000S00000MET	C12	Insert (Turning)
CCMW 00T00000S00000SET	C12	Insert (Turning)
CCMW 00T00000T00000ME	C12	Insert (Turning)
CCMW 00T00000T00000SE	C12	Insert (Turning)
CCRN% 0000□-00A	D32	Toolholder (Turning)
CDHN% 0000□-00GX	D29	Toolholder (Turning)
CDJN% 0000□-00	D23	Toolholder (Turning)
CDJN% 0000□-00GX	D29	Toolholder (Turning)
CE-010	D22, D23, F81, P13	Spare Parts (Clamp Set)
CE-020	D25, D26, D34, D35, P13	Spare Parts (Clamp Set)
CE-030	D27, P13	Spare Parts (Clamp Set)
CE-030A	D25, D27, D32, D33, D34, D35, D36, P13	Spare Parts (Clamp Set)
CE-040	D25, D27, D35, P13	Spare Parts (Clamp Set)
CE-111	G19, P15	Spare Parts (Clamp)
CE-121	G19, P15	Spare Parts (Clamp)
CE-131	G19, P15	Spare Parts (Clamp)
CE-141	G19, P15	Spare Parts (Clamp)
CE-220	D22, D25, P13	Spare Parts (Clamp Set)
CE-320	F81, P13	Spare Parts (Clamp Set)
CE-360S	F83, P13	Spare Parts (Clamp Set)

# Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
CE-410	<b>D28, D29, D30, D31, F82, P13</b>	Spare Parts (Clamp Set)
CE-430	<b>D29, P13</b>	Spare Parts (Clamp Set)
CELN%L ○○○○B-○○	<b>F81</b>	Boring Bar / Previous Description
CELN%L ○○○○□-○○	<b>D23</b>	Toolholder (Turning)
CGA-3%L	<b>G21, P15</b>	Spare Parts (Clamp)
CGA-4%L	<b>G21, P15</b>	Spare Parts (Clamp)
CGA-5%L	<b>G21, P15</b>	Spare Parts (Clamp)
CGB%L	<b>G15, P15</b>	Spare Parts (Clamp)
CGH-1%L	<b>G20, G61, P15</b>	Spare Parts (Clamp)
CGH-2%L	<b>G20, G61, P15</b>	Spare Parts (Clamp)
CGH-3%L	<b>G20, P15</b>	Spare Parts (Clamp)
CGIA-3R	<b>G64, P15</b>	Spare Parts (Clamp)
CGIA-4R	<b>G64, P15</b>	Spare Parts (Clamp)
CGIA-5R	<b>G64, P15</b>	Spare Parts (Clamp)
CH-20R	<b>M38, P15</b>	Spare Parts (Clamp)
CIN%L ○○○○S-○○	<b>J17</b>	Toolholder (Threading)
CL63-1	<b>N3, N4, N5, N6, N7, N8, N9, N10, P18</b>	Spare Parts (Coolant Pipe)
CL100-1	<b>N3, N4, N10, P18</b>	Spare Parts (Coolant Pipe)
CNGA ○○○○○○	<b>B19, B79, C6</b>	Insert (Turning)
CNGA ○○○○○○ME	<b>C6</b>	Insert (Turning) / Previous Description
CNGA ○○○○○○ME-T	<b>C6</b>	Insert (Turning) / Previous Description
CNGA ○○○○○○MEW	<b>C6</b>	Insert (Turning) / Previous Description
CNGA ○○○○○○SE	<b>C6</b>	Insert (Turning) / Previous Description
CNGA ○○○○○○SE-T	<b>C6</b>	Insert (Turning) / Previous Description
CNGA ○○○○○○S○○○○○	<b>B79, C6</b>	Insert (Turning)
CNGA ○○○○○○S○○○○○ME	<b>C6</b>	Insert (Turning)
CNGA ○○○○○○S○○○○○MEH	<b>C6</b>	Insert (Turning)
CNGA ○○○○○○S○○○○○MEP	<b>C6</b>	Insert (Turning)
CNGA ○○○○○○S○○○○○MET	<b>C6</b>	Insert (Turning)
CNGA ○○○○○○S○○○○○MEW	<b>C6</b>	Insert (Turning)
CNGA ○○○○○○S○○○○○SE	<b>C6</b>	Insert (Turning)
CNGA ○○○○○○S○○○○○SET	<b>C6</b>	Insert (Turning)
CNGA ○○○○○○T○○○○○	<b>B79, C6</b>	Insert (Turning)
CNGA ○○○○○○T○○○○○ME	<b>C6</b>	Insert (Turning)
CNGA ○○○○○○T○○○○○SE	<b>C6</b>	Insert (Turning)
CNGA ○○○○○○T○○○○○T○○	<b>B79</b>	Insert (Turning) / Previous Description
CNGG ○○○○○○AH	<b>B19</b>	Insert (Turning)
CNGG ○○○○○○DP	<b>B14</b>	Insert (Turning)
CNGG ○○○○○○FP-TK	<b>B17</b>	Insert (Turning)
CNGG ○○○○○○HQ	<b>B14</b>	Insert (Turning)
CNGG ○○○○○○%L	<b>B19</b>	Insert (Turning)
CNGG ○○○○○○%-25R	<b>B19</b>	Insert (Turning)
CNGG ○○○○○○%-A3	<b>B19</b>	Insert (Turning)
CNGG ○○○○○○%-S	<b>B19</b>	Insert (Turning)
CNGG ○○○○○○TK	<b>B17</b>	Insert (Turning)
CNGG ○○○○○○Z	<b>B19</b>	Insert (Turning)
CNGM ○○○○○○BB○	<b>C6</b>	Insert (Turning) / Previous Description
CNGM ○○○○○○S○○○○○BB○	<b>C6</b>	Insert (Turning)
CNGN ○○○○○○	<b>B79</b>	Insert (Turning) / Previous Description
CNGN ○○○○○○S○○○○○	<b>B79</b>	Insert (Turning)
CNGN ○○○○○○T○○○○○	<b>B79</b>	Insert (Turning)
CNGU ○○○○○○ME%-U	<b>B42</b>	Insert (Turning)
CNGU ○○○○○○MF%-F	<b>B42</b>	Insert (Turning)
CNGU ○○○○○○MF%-U	<b>B42</b>	Insert (Turning)
CNGU ○○○○○○MF-SK	<b>B42</b>	Insert (Turning)
CNGU ○○○○○○MFP-SK	<b>B42</b>	Insert (Turning)
CNGX ○○○○○○T○○○○○	<b>B79</b>	Insert (Turning)
CNMA ○○○○○○	<b>B19, B79</b>	Insert (Turning)
CNMA ○○○○○○S○○○○○	<b>B79</b>	Insert (Turning)
CNMA ○○○○○○T○○	<b>B79</b>	Insert (Turning) / Previous Description
CNMG ○○○○○○	<b>B16</b>	Insert (Turning)
CNMG ○○○○○○AH	<b>B19</b>	Insert (Turning)
CNMG ○○○○○○C	<b>B18</b>	Insert (Turning)
CNMG ○○○○○○CJ	<b>B14</b>	Insert (Turning)
CNMG ○○○○○○CQ	<b>B14</b>	Insert (Turning)
CNMG ○○○○○○CS	<b>B15</b>	Insert (Turning)
CNMG ○○○○○○GC	<b>B19</b>	Insert (Turning)
CNMG ○○○○○○GP	<b>B14</b>	Insert (Turning)
CNMG ○○○○○○GS	<b>B15</b>	Insert (Turning)
CNMG ○○○○○○GT	<b>B15</b>	Insert (Turning)
CNMG ○○○○○○GU	<b>B18</b>	Insert (Turning)

Description	Page	Category
CNMG ○○○○○○HK	<b>B14</b>	Insert (Turning)
CNMG ○○○○○○HQ	<b>B14</b>	Insert (Turning)
CNMG ○○○○○○HS	<b>B15</b>	Insert (Turning)
CNMG ○○○○○○HT	<b>B15</b>	Insert (Turning)
CNMG ○○○○○○HU	<b>B18</b>	Insert (Turning)
CNMG ○○○○○○MQ	<b>B18</b>	Insert (Turning)
CNMG ○○○○○○MS	<b>B18</b>	Insert (Turning)
CNMG ○○○○○○MU	<b>B18</b>	Insert (Turning)
CNMG ○○○○○○PH	<b>B16</b>	Insert (Turning)
CNMG ○○○○○○PS	<b>B15</b>	Insert (Turning)
CNMG ○○○○○○PT	<b>B15</b>	Insert (Turning)
CNMG ○○○○○○TK	<b>B17</b>	Insert (Turning)
CNMG ○○○○○○TN-V	<b>B15</b>	Insert (Turning)
CNMG ○○○○○○WP	<b>B14</b>	Insert (Turning)
CNMG ○○○○○○WQ	<b>B14</b>	Insert (Turning)
CNMG ○○○○○○XF	<b>B17</b>	Insert (Turning)
CNMG ○○○○○○XP	<b>B17</b>	Insert (Turning)
CNMG ○○○○○○XP-T	<b>B17</b>	Insert (Turning)
CNMG ○○○○○○XQ	<b>B17</b>	Insert (Turning)
CNMG ○○○○○○XS	<b>B17</b>	Insert (Turning)
CNMG ○○○○○○ZS	<b>B18</b>	Insert (Turning)
CNMM ○○○○○○M	<b>C20</b>	Insert (Turning)
CNMM ○○○○○○M-NE	<b>C20</b>	Insert (Turning)
CNMM ○○○○○○M-SE	<b>C20</b>	Insert (Turning)
CNMM ○○○○○○PX	<b>B16</b>	Insert (Turning)
CNMN ○○○○○○	<b>B79, C11</b>	Insert (Turning)
CNMN ○○○○○○S○○○○○	<b>C11</b>	Insert (Turning)
CNMN ○○○○○○T○○○○○	<b>B79</b>	Insert (Turning)
CNMM ○○○○○○E-GK	<b>B42</b>	Insert (Turning)
CP-2D	<b>D14, P15</b>	Spare Parts (Clamp)
CP-3D	<b>D8, D10, D12, D20, P15</b>	Spare Parts (Clamp)
CP-5D	<b>D16, P15</b>	Spare Parts (Clamp)
CP-8TE	<b>M59, P15</b>	Spare Parts (Clamp)
CP-8W	<b>M59, P15</b>	Spare Parts (Clamp)
CPGB ○○○○○○	<b>C12</b>	Insert (Turning) / Previous Description
CPGB ○○○○○○ME	<b>C12</b>	Insert (Turning) / Previous Description
CPGB ○○○○○○ME-T	<b>C12</b>	Insert (Turning) / Previous Description
CPGB ○○○○○○SE	<b>C12</b>	Insert (Turning) / Previous Description
CPGB ○○○○○○SE-T	<b>C12</b>	Insert (Turning) / Previous Description
CPGB ○○○○○○S○○○○○MES	<b>C12</b>	Insert (Turning)
CPGB ○○○○○○S○○○○○MET	<b>C12</b>	Insert (Turning)
CPGB ○○○○○○S○○○○○SET	<b>C12</b>	Insert (Turning)
CPGB ○○○○○○T○○○○○	<b>C12</b>	Insert (Turning)
CPGB ○○○○○○T○○○○○ME	<b>C12</b>	Insert (Turning)
CPGB ○○○○○○T○○○○○SE	<b>C12</b>	Insert (Turning)
CPMB ○○○○○○	<b>B50</b>	Insert (Turning)
CPMH ○○○○○○	<b>B50, C22</b>	Insert (Turning)
CPMH ○○○○○○HQ	<b>B50</b>	Insert (Turning)
CPMH ○○○○○○NE	<b>C22</b>	Insert (Turning)
CPMH ○○○○○○%-Y	<b>B50</b>	Insert (Turning)
CPMH ○○○○○○SE	<b>C22</b>	Insert (Turning)
CPMT ○○○○○○GP	<b>B50</b>	Insert (Turning)
CPMT ○○○○○○XP	<b>B50</b>	Insert (Turning)
CPMT ○○○○○○XQ	<b>B50</b>	Insert (Turning)
CP-RC%L	<b>D38, F71, P13</b>	Spare Parts (Clamp Set)
CP8X15TL	<b>M32, P2</b>	Spare Parts (Screw)
CP8X23TL	<b>M32, P2</b>	Spare Parts (Screw)
CPS-1	<b>F69, P14</b>	Spare Parts (Clamp Set)
CPS-2	<b>F68, F69, P14</b>	Spare Parts (Clamp Set)
CPS-2P	<b>E42, E43, P14</b>	Spare Parts (Clamp Set)
CPS-2S	<b>M108, P14</b>	Spare Parts (Clamp Set)
CPS-2TR	<b>M105, P14</b>	Spare Parts (Clamp Set)
CPS-3	<b>E42, E43, F68, F69, P14</b>	Spare Parts (Clamp Set)
CPS-4V	<b>G57, P14</b>	Spare Parts (Clamp Set)
CPS-5E	<b>M108, P14</b>	Spare Parts (Clamp Set)
CPS-5F	<b>G57, M154, P14</b>	Spare Parts (Clamp Set)
CPS-5%L	<b>D17, P14</b>	Spare Parts (Clamp Set)
CPS-5S	<b>J16, J17, N9, P14</b>	Spare Parts (Clamp Set)
CPS-5V	<b>G57, G84, G86, G96, P14</b>	Spare Parts (Clamp Set)
CPS-6F	<b>M154, P14</b>	Spare Parts (Clamp Set)
CPS-6M	<b>M33, M37, M45, P14</b>	Spare Parts (Clamp Set)

T

?

Index



Description	Page	Category
CPS-6S	<b>J16, J17, N9, P14</b>	Spare Parts (Clamp Set)
CPS-6V	<b>G57, G86, G89, G96, M153, P14</b>	Spare Parts (Clamp Set)
CPS-8V	<b>G86, G89, G96, P14</b>	Spare Parts (Clamp Set)
CRDNN ○○○○□-○○	<b>D27</b>	Toolholder (Turning)
CRDNN ○○○○□-○○A	<b>D33</b>	Toolholder (Turning)
CRSN%L ○○○○□-○○	<b>D27</b>	Toolholder (Turning)
CRSN%L ○○○○□-○○A	<b>D33</b>	Toolholder (Turning)
CS-2D	<b>D14, P2</b>	Spare Parts (Screw)
CS-3D	<b>D8, D10, D12, D20, P2</b>	Spare Parts (Screw)
CS-5D	<b>D16, P2</b>	Spare Parts (Screw)
CSBP%L ○○○○□-○○N	<b>E42</b>	Toolholder (Turning)
CSDNN ○○○○□-○○	<b>D25</b>	Toolholder (Turning)
CSDNN ○○○○□-○○A	<b>D35</b>	Toolholder (Turning)
CSDNN ○○○○□-○○GX	<b>D30</b>	Toolholder (Turning)
CSDPN ○○○○□-○○N	<b>E42</b>	Toolholder (Turning)
CSKN%L ○○○○□-○○	<b>D25</b>	Toolholder (Turning)
CSKN%L ○○○○□-○○A	<b>D34</b>	Toolholder (Turning)
CSKN%L ○○○○B-○○	<b>F81</b>	Boring Bar / Previous Description
CSKN%L ○○○○□-○○GX	<b>D31</b>	Toolholder (Turning)
CSKP%L ○○○○B-○○	<b>F68</b>	Boring Bar / Previous Description
CSKP%L ○○○○□-○○N	<b>E42</b>	Toolholder (Turning)
CS-N%L ○○○○□-○○	<b>D25</b>	Toolholder (Turning)
CS-N%L ○○○○□-○○GX	<b>D31</b>	Toolholder (Turning)
CSRN%L ○○○○□-○○	<b>D25</b>	Toolholder (Turning)
CSRN%L ○○○○□-○○A	<b>D34</b>	Toolholder (Turning)
CSRN%L ○○○○□-○○GX	<b>D30</b>	Toolholder (Turning)
CSSN%L ○○○○□-○○	<b>D25</b>	Toolholder (Turning)
CSSN%L ○○○○□-○○A	<b>D35</b>	Toolholder (Turning)
CSSN%L ○○○○□-○○GX	<b>D30</b>	Toolholder (Turning)
CSSP%L ○○○○□-○○N	<b>E42</b>	Toolholder (Turning)
CSYN%L ○○○○□-○○	<b>D25</b>	Toolholder (Turning)
CSYN%L ○○○○□-○○A	<b>D34</b>	Toolholder (Turning)
CSYN%L ○○○○□-○○GX	<b>D31</b>	Toolholder (Turning)
CT○○○ -45A	<b>K7, K8, K9, K11</b>	Insert (Drilling) / Chamfering
CTFP%L ○○○○□-○○N	<b>E43</b>	Toolholder (Turning)
CTGP%L ○○○○□-○○N	<b>E43</b>	Toolholder (Turning)
CTJN%L ○○○○□-○○	<b>D26</b>	Toolholder (Turning)
CTJN%L ○○○○□-○○A	<b>D36</b>	Toolholder (Turning)
CTTP%L ○○○○□-○○N	<b>E43</b>	Toolholder (Turning)
CTUN%L ○○○○B-○○A	<b>F83</b>	Boring Bar / Previous Description
CTUN%L ○○○○□-○○	<b>D26</b>	Toolholder (Turning)
CTUN%L ○○○○□-○○A	<b>D36</b>	Toolholder (Turning)
CTUP%L ○○○○B-○○	<b>F69</b>	Boring Bar / Previous Description
<b>D</b>		
DC ○○○○M-SC	<b>K4, K5, K6</b>	Insert (Drilling)
DC-44	<b>D8, P8</b>	Spare Parts (Shim)
DCET ○○○○○○(○)F%L-J	<b>B56</b>	Insert (Turning)
DCET ○○○○○○(○)F%L-JSF	<b>B56</b>	Insert (Turning)
DCET ○○○○○○(○)F%L-USF	<b>B54</b>	Insert (Turning)
DCET ○○○○○○(○)MF%L-J	<b>B56</b>	Insert (Turning)
DCET ○○○○○○(○)MF%L-JSF	<b>B56</b>	Insert (Turning)
DCET ○○○○○○(○)MF%L-U	<b>B55</b>	Insert (Turning)
DCET ○○○○○○(○)MF%L-USF	<b>B54</b>	Insert (Turning)
DCET ○○○○○○(○)M%L-F	<b>B54</b>	Insert (Turning)
DCET ○○○○○○(○)M%L-FSF	<b>B53</b>	Insert (Turning)
DCET ○○○○○○(○)M%L-FSF	<b>B53</b>	Insert (Turning)
DCGT ○○○○○○	<b>B52</b>	Insert (Turning)
DCGT ○○○○○○AH	<b>B57</b>	Insert (Turning)
DCGT ○○○○○○CF	<b>B51</b>	Insert (Turning)
DCGT ○○○○○○CK	<b>B51</b>	Insert (Turning)
DCGT ○○○○○○(○)E%L-J	<b>B56</b>	Insert (Turning)
DCGT ○○○○○○E%L-U	<b>B55</b>	Insert (Turning)
DCGT ○○○○○○(○)F%L-J	<b>B56</b>	Insert (Turning)
DCGT ○○○○○○(○)F%L-U	<b>B55</b>	Insert (Turning)
DCGT ○○○○○○(○)M	<b>B52</b>	Insert (Turning)
DCGT ○○○○○○(○)ME%L-J	<b>B56</b>	Insert (Turning)
DCGT ○○○○○○ME%L-U	<b>B55</b>	Insert (Turning)
DCGT ○○○○○○(○)MF	<b>B53</b>	Insert (Turning)
DCGT ○○○○○○MF-GF	<b>B51</b>	Insert (Turning)
DCGT ○○○○○○MF-GQ	<b>B52</b>	Insert (Turning)

Description	Page	Category
DCGT ○○○○○○MFP-GF	<b>B51</b>	Insert (Turning)
DCGT ○○○○○○MFP-GQ	<b>B52</b>	Insert (Turning)
DCGT ○○○○○○(○)MF%L-J	<b>B56</b>	Insert (Turning)
DCGT ○○○○○○(○)MF%L-U	<b>B55</b>	Insert (Turning)
DCGT ○○○○○○(○)M%L-F	<b>B54</b>	Insert (Turning)
DCGT ○○○○○○M-CF	<b>B51</b>	Insert (Turning)
DCGT ○○○○○○MP-CF	<b>B51</b>	Insert (Turning)
DCGT ○○○○○○M-CK	<b>B51</b>	Insert (Turning)
DCGT ○○○○○○MP-CK	<b>B51</b>	Insert (Turning)
DCGT ○○○○○○%L-A3	<b>B57</b>	Insert (Turning)
DCGT ○○○○○○(○)%L-F	<b>B54</b>	Insert (Turning)
DCGW ○○○○○○	<b>B57</b>	Insert (Turning)
DCLN%L ○○○○□-○○	<b>D8</b>	Toolholder (Turning)
DCMT ○○○○○○	<b>B52, C22</b>	Insert (Turning)
DCMT ○○○○○○GK	<b>B52</b>	Insert (Turning)
DCMT ○○○○○○GP	<b>B51</b>	Insert (Turning)
DCMT ○○○○○○HQ	<b>B52</b>	Insert (Turning)
DCMT ○○○○○○MQ	<b>B53</b>	Insert (Turning)
DCMT ○○○○○○NE	<b>C22</b>	Insert (Turning)
DCMT ○○○○○○%L-NE	<b>C22</b>	Insert (Turning)
DCMT ○○○○○○SE	<b>C22</b>	Insert (Turning)
DCMT ○○○○○○XP	<b>B53</b>	Insert (Turning)
DCMT ○○○○○○XQ	<b>B53</b>	Insert (Turning)
DCMW ○○○○○○	<b>C13</b>	Insert (Turning) / Previous Description
DCMW ○○○○○○ME	<b>C13</b>	Insert (Turning) / Previous Description
DCMW ○○○○○○ME-T	<b>C13</b>	Insert (Turning) / Previous Description
DCMW ○○○○○○SE	<b>C13</b>	Insert (Turning) / Previous Description
DCMW ○○○○○○SE-T	<b>C13</b>	Insert (Turning) / Previous Description
DCMW ○○○○○○S○○○○○MES	<b>C13</b>	Insert (Turning)
DCMW ○○○○○○S○○○○○MET	<b>C13</b>	Insert (Turning)
DCMW ○○○○○○S○○○○○SET	<b>C13</b>	Insert (Turning)
DCMW ○○○○○○T○○○○○	<b>C13</b>	Insert (Turning)
DCMW ○○○○○○T○○○○○ME	<b>C13</b>	Insert (Turning)
DCMW ○○○○○○T○○○○○SE	<b>C13</b>	Insert (Turning)
DD-43	<b>D10, P8</b>	Spare Parts (Shim)
DD-44	<b>D10, P8</b>	Spare Parts (Shim)
DDJN%L ○○○○□-○○○○	<b>D10</b>	Toolholder (Turning)
DDHN%L ○○○○□-○○○○	<b>D10</b>	Toolholder (Turning)
DMC ○○○	<b>M104</b>	End Mill
DMC ○○○H	<b>M106</b>	End Mill
DMC ○○○SX	<b>M105</b>	End Mill
DMC ○○○SXT	<b>M105</b>	End Mill
DMC ○○○SX-○○○	<b>M105</b>	End Mill
DMC ○○○-S○○	<b>M104</b>	End Mill
DNGA ○○○○○○	<b>B80, C7</b>	Insert (Turning)
DNGA ○○○○○○ME	<b>C7</b>	Insert (Turning) / Previous Description
DNGA ○○○○○○ME-T	<b>C7</b>	Insert (Turning) / Previous Description
DNGA ○○○○○○SE	<b>C7</b>	Insert (Turning) / Previous Description
DNGA ○○○○○○SE-T	<b>C7</b>	Insert (Turning) / Previous Description
DNGA ○○○○○○S○○○○○	<b>B80</b>	Insert (Turning)
DNGA ○○○○○○S○○○○○ME	<b>C7</b>	Insert (Turning)
DNGA ○○○○○○S○○○○○MEH	<b>C7</b>	Insert (Turning)
DNGA ○○○○○○S○○○○○MEP	<b>C7</b>	Insert (Turning)
DNGA ○○○○○○S○○○○○MET	<b>C7</b>	Insert (Turning)
DNGA ○○○○○○S○○○○○SE	<b>C7</b>	Insert (Turning)
DNGA ○○○○○○S○○○○○SET	<b>C7</b>	Insert (Turning)
DNGA ○○○○○○T○○○○○	<b>B80, C7</b>	Insert (Turning)
DNGA ○○○○○○T○○○○○ME	<b>C7</b>	Insert (Turning)
DNGA ○○○○○○T○○○○○SE	<b>C7</b>	Insert (Turning)
DNGA ○○○○○○-T○○	<b>B80</b>	Insert (Turning) / Previous Description
DNGG ○○○○○○AH	<b>B25</b>	Insert (Turning)
DNGG ○○○○○○DP	<b>B20</b>	Insert (Turning)
DNGG ○○○○○○FP-TK	<b>B23</b>	Insert (Turning)
DNGG ○○○○○○%L	<b>B25</b>	Insert (Turning)
DNGG ○○○○○○%L-A3	<b>B25</b>	Insert (Turning)
DNGG ○○○○○○%L-S	<b>B25</b>	Insert (Turning)
DNGG ○○○○○○TK	<b>B23</b>	Insert (Turning)
DNGM ○○○○○○BBO	<b>C7</b>	Insert (Turning) / Previous Description
DNGM ○○○○○○S○○○○○BBO	<b>C7</b>	Insert (Turning)
DNGN ○○○○○○	<b>B80</b>	Insert (Turning) / Previous Description
DNGN ○○○○○○S○○○○○	<b>B80</b>	Insert (Turning)
DNGN ○○○○○○T○○○○○	<b>B80</b>	Insert (Turning)
DNGU ○○○○○○ME%L-U	<b>B43</b>	Insert (Turning)
DNGU ○○○○○○(○)MF%L-F	<b>B43</b>	Insert (Turning)
DNGU ○○○○○○MF%L-U	<b>B43</b>	Insert (Turning)
DNGU ○○○○○○MF-SK	<b>B43</b>	Insert (Turning)

Description	Page	Category
DNGU ○○○○○○MFP-SK	B43	Insert (Turning)
DNGX ○○○○○○T○○○○○	B80	Insert (Turning)
DNMA ○○○○○○	B24	Insert (Turning)
DNMG ○○○○○○	B22	Insert (Turning)
DNMG ○○○○○○AH	B25	Insert (Turning)
DNMG ○○○○○○C	B24	Insert (Turning)
DNMG ○○○○○○CJ	B20	Insert (Turning)
DNMG ○○○○○○CQ	B20	Insert (Turning)
DNMG ○○○○○○CS	B21	Insert (Turning)
DNMG ○○○○○○GC	B24	Insert (Turning)
DNMG ○○○○○○GP	B20	Insert (Turning)
DNMG ○○○○○○GS	B21	Insert (Turning)
DNMG ○○○○○○GT	B22	Insert (Turning)
DNMG ○○○○○○GU	B23	Insert (Turning)
DNMG ○○○○○○HK	B20	Insert (Turning)
DNMG ○○○○○○HQ	B20	Insert (Turning)
DNMG ○○○○○○HS	B21	Insert (Turning)
DNMG ○○○○○○HT	B22	Insert (Turning)
DNMG ○○○○○○HU	B23	Insert (Turning)
DNMG ○○○○○○MQ	B24	Insert (Turning)
DNMG ○○○○○○MS	B24	Insert (Turning)
DNMG ○○○○○○MU	B24	Insert (Turning)
DNMG ○○○○○○PH	B22	Insert (Turning)
DNMG ○○○○○○PS	B21	Insert (Turning)
DNMG ○○○○○○PT	B21	Insert (Turning)
DNMG ○○○○○○TK	B23	Insert (Turning)
DNMG ○○○○○○TN-V	B21	Insert (Turning)
DNMG ○○○○○○XF	B22	Insert (Turning)
DNMG ○○○○○○XP	B22	Insert (Turning)
DNMG ○○○○○○XP-T	B23	Insert (Turning)
DNMG ○○○○○○XQ	B23	Insert (Turning)
DNMG ○○○○○○XS	B23	Insert (Turning)
DNMG ○○○○○○ZS	B24	Insert (Turning)
DNMM ○○○○○○M	C20	Insert (Turning)
DNMM ○○○○○○M-NE	C20	Insert (Turning)
DNMM ○○○○○○M-SE	C20	Insert (Turning)
DNMM ○○○○○○PX	B22	Insert (Turning)
DNMU ○○○○○○E-GK	B43	Insert (Turning)
DPET ○○○○○○(○)F%-USF	B57	Insert (Turning)
DPET ○○○○○○(○)M%-FSF	B57	Insert (Turning)
DPET ○○○○○○(○)MF%-USF	B57	Insert (Turning)
DPET ○○○○○○(○)%-FSF	B57	Insert (Turning)
DR ○○-○○	M120	Spare Parts (Drive-Ring)
DR ○○-○○□	M120	Spare Parts (Drive-Ring)
DR ○○○○-○○○○	M121	Spare Parts (Drive-Ring)
DR ○○○○-○○○○□	M121	Spare Parts (Drive-Ring)
DR12CR-IN	K49	Cartridge (Drill)
DR12CR-OUT	K49	Cartridge (Drill)
DR20CR-IN	K49	Cartridge (Drill)
DR20CR-OUT	K49	Cartridge (Drill)
DS ○○○	K39	Insert (Drilling)
DS-44	D12, P8	Spare Parts (Shim)
DSBN%L ○○○○□-○○	D12	Toolholder (Turning)
DT-7	G52, G53, K40, K42, K44, K46, M158, P17	Spare Parts (Trox Wrench / Screwdriver type)
DT-8	K42, K44, K46, M97, M109, M112, M116, M144, M152, M160, P17	Spare Parts (Trox Wrench / Screwdriver type)
DT-9	K11	Spare Parts (Trox Wrench / Screwdriver type)
DT-10	M39, M61, M97, M101, M112, M116, M144, M146, M147, M152, M156, M158, M160, P17	Spare Parts (Trox Wrench / Screwdriver type)
DT-15	K11, K42, K44, K46, M87, M90, M91, M110, M112, M116, M144, M146, M147, M152, M160, P17	Spare Parts (Trox Wrench / Screwdriver type)

Description	Page	Category
DT-20	K27, K29, K31, K32, K43, K44, K45, K46, K47, K48, K49, M61, M107, M144, M146, M147, P17	Spare Parts (Trox Wrench / Screwdriver type)
DT-25	K27, K29, K31, K32, K43, K45, K49, M147, P17	Spare Parts (Trox Wrench / Screwdriver type)
DT-32	D14, P8	Spare Parts (Shim)
DTGN%L ○○○○□-○○	D14	Toolholder (Turning)
DTM-6	K26, K28, K30, K32, M70, M71, M112, M116, P17	Spare Parts (Trox Wrench / Screwdriver type)
DTM-7	K26, K28, K30, K32, P17	Spare Parts (Trox Wrench / Screwdriver type)
DTM-8	K26, K28, K30, K32, M62, M63, M64, M76, M77, M79, P17	Spare Parts (Trox Wrench / Screwdriver type)
DTM-10	K26, K28, K30, K32, P17	Spare Parts (Trox Wrench / Screwdriver type)
DTM-15	K27, K28, K30, K32, M25, M55, M63, M64, M76, M77, M79, P17	Spare Parts (Trox Wrench / Screwdriver type)
DTP-9	M136, M137, P17	Spare Parts (Trox Wrench / Screwdriver type)
DTP-15	M28, M136, M137, P17	Spare Parts (Trox Wrench / Screwdriver type)
DTP-20	M60, P17	Spare Parts (Trox Wrench / Screwdriver type)
DTPM-8	M49, P17	Spare Parts (Trox Wrench / Screwdriver type)
DTPM-15	M49, P17	Spare Parts (Trox Wrench / Screwdriver type)
DV-33	D16, P8	Spare Parts (Shim)
DVLN%L ○○○○□-○○	D16	Toolholder (Turning)
DVPN%L ○○○○□-○○	D16	Toolholder (Turning)
DW-44	D20, P8	Spare Parts (Shim)
DWLN%L ○○○○□-○○	D20	Toolholder (Turning)
DVVNN ○○○○□-○○	D16	Toolholder (Turning)
<b>E</b>		
ENGN ○○○○○○	B80	Insert (Turning) / Previous Description
ENGN ○○○○○○S○○○○○	B80	Insert (Turning)
ENGN ○○○○○○T○○○○○	B80	Insert (Turning)
EZBR ○○○○○○-○○○NB	C18, C31, F16	EZ Bars (Boring)
EZBR ○○○○○○HP-○○○F	F14	EZ Bars (Boring)
EZBR ○○○○○○HP-○○○H	F14	EZ Bars (Boring)
EZBR ○○○○○○ST-○○○F	F15	EZ Bars (Boring)
EZBR ○○○○○○ST-○○○H	F15	EZ Bars (Boring)
EZGR ○○○○○○-○○○	G45	EZ Bars (Internal Grooving)
EZH ○○○○○○(○)HP-○○○	F18, F19, F84	Sleeve (for EZ Bars)
EZH ○○○○○○(○)ST-○○○	F20, F21, F84	Sleeve (for EZ Bars)
○○○□- SCLC%L○○-○○	F37, F97	Boring Bars
○○○□- SCLC%L○○-○○A	F35	Boring Bars (Dynamic Bar)
○○○□- SCLC%L○○-○○A-○/○	F35	Boring Bars (Dynamic Bar)
○○○□- SCLP%L○○-○○	F41, F97	Boring Bars
○○○□- SCLP%L○○-○○A	F39	Boring Bars (Dynamic Bar)
○○○□- SCLP%L○○-○○A-○/○	F39	Boring Bars (Dynamic Bar)
○○○□- SDQC%L○○-○○A	F44	Boring Bars (Dynamic Bar)
○○○□- SDQC%L○○-○○A-○/○	F44	Boring Bars (Dynamic Bar)
○○○□- SDUC%L○○-○○A	F43	Boring Bars (Dynamic Bar)
○○○□- SDUC%L○○-○○A-○/○	F43	Boring Bars (Dynamic Bar)
○○○□- SDZC%L○○-○○A	F45	Boring Bars (Dynamic Bar)
○○○□- STLP%L○○-○○A	F51	Boring Bars (Dynamic Bar)
○○○□- STLP%L○○-○○A-○/○	F51	Boring Bars (Dynamic Bar)
○○○□- STUP%L○○-○○	F54, F98	Boring Bars
○○○□- SVPB%L○○-○○A	F59	Boring Bars (Dynamic Bar)

T



Index

Description	Page	Category
E○○□- SVPC%○○-○○A	F59	Boring Bars (Dynamic Bar)
E○○□- SVUB%○○-○○A	F61	Boring Bars (Dynamic Bar)
E○○□- SVUC%○○-○○A	F61	Boring Bars (Dynamic Bar)
E○○□- SWUB%○○-○○A	F65	Boring Bars (Dynamic Bar)
E○○□- SWUB%○○-○○A-○/○	F65	Boring Bars (Dynamic Bar)
E○○□- SWUP%○○-○○A	F65	Boring Bars (Dynamic Bar)
E○○□- SWUP%○○-○○A-○/○	F65	Boring Bars (Dynamic Bar)
<b>F</b>		
FGG% ○○○○-○○	G35	Insert (Grooving / Plunge&Turn)
FH-2	P17	Spare Parts (Hexagon Wrench / Flag type)
FH-2.5	P17	Spare Parts (Hexagon Wrench / Flag type)
FMM ○○-○○	G93	Insert (Grooving / Plunge&Turn)
FMN ○	G93	Insert (Grooving / Plunge&Turn)
FPMT ○○○○○ER	M21	Insert (Milling)
FS- ○○	K11	Spare Parts (Drill fitting screw for Chamfering Attachment)
FT-6	P17	Spare Parts (Trox Wrench / Flag type)
FT-7	P17	Spare Parts (Trox Wrench / Flag type)
FT-8	P17	Spare Parts (Trox Wrench / Flag type)
FT-10	P17	Spare Parts (Trox Wrench / Flag type)
FT-15	P17	Spare Parts (Trox Wrench / Flag type)
FTK ○	G95	Insert (Cut-Off)
FTS-15	F74	Spare Parts (Trox Wrench / Flag type)
<b>G</b>		
GA ○○	G21	Insert (Grooving)
GB ○○%○○○	C27, G14	Insert (Grooving)
GB ○○%○○○R	G14	Insert (Grooving)
GBA ○○%○○○	C17, C27, G10, G11, G12	Insert (Grooving / Previous Description)
GBA ○○%○○○MY	G11	Insert (Grooving / Previous Description)
GBA ○○%○○○R	G12	Insert (Grooving / Previous Description)
GBA ○○%○○○-○○	C17, C27, G10, G11, G12	Insert (Grooving)
GBA ○○%○○○-○○MY	G11	Insert (Grooving)
GBA ○○%○○○-○○R	G12	Insert (Grooving)
GDFM ○○○○N-○○○DM	G73	Insert (Face Grooving)
GDFM ○○○○N-○○○GM	G73	Insert (Face Grooving)
GDFMS ○○○○N-○○○DM	G73	Insert (Face Grooving)
GDG ○○○○N-○○○GS	G24	Insert (Grooving)
GDGS ○○○○N-○○○NB	C17, C28, G25	Insert (Grooving)
GDM ○○○○N-○○○GM	G24	Insert (Grooving)
GDM ○○○○N-○○○GL	G24	Insert (Grooving)
GDM ○○○○N-○○○PH	G24, H12	Insert (Grooving / Cut-Off)
GDM ○○○○N-○○○PM	G25, H12	Insert (Cut-Off)
GDM ○○○○N-○○○R-CM	G24	Insert (Grooving)
GDM ○○○○R-○○○PM-○D	G25, H12	Insert (Cut-Off)
GDMS ○○○○N-○○○GM	G24	Insert (Grooving)
GDMS ○○○○N-○○○PH	G24, H12	Insert (Grooving / Cut-Off)
GDMS ○○○○N-○○○PM	G25, H12	Insert (Cut-Off)
GDMS ○○○○R-○○○PM-○D	G25, H12	Insert (Cut-Off)
GE% ○○○-○○○□	G50, G51	Insert (Grooving)
GER ○○○-○○○□□	G50, G51	Insert (Grooving)
GFV% ○○○○□-○○○(○)□	G86	Toolholder (Grooving)
GFVS% ○○○○□-○○AA	G84	Toolholder (Grooving)
GFVS% ○○○○□-○○○(○)□	G89	Toolholder (Grooving)
GFVT% ○○○○□-○○AA	G84	Toolholder (Grooving)
GFVT% ○○○○□-○○○(○)□	G89	Toolholder (Grooving)
GH ○○○○(○)-○○	B87, G21, G61	Insert (Grooving)
GHU ○○-○○	G21, G61	Insert (Grooving)
GIA ○○	G64	Insert (Grooving)
GIFV% ○○○○B-○○○□	G96	Toolholder (Grooving)
GIV% ○○○○-○□	G57	Toolholder (Grooving)
GIV% ○○○○-○□(□)	G57	Toolholder (Grooving)
GIV% ○○○○-○□E	G57	Toolholder (Grooving)
GIV% ○○○○-○□W	G57	Toolholder (Grooving)
GMG ○○○○-○○	G34	Insert (Grooving / Plunge&Turn) / Previous Description
GMG ○○○○-○○MG	G34, G63, G94	Insert (Grooving / Plunge&Turn) / Previous Description
GMG ○○○○-○○R	G34	Insert (Grooving / Plunge&Turn) / Previous Description

Description	Page	Category
GMG ○○○○-○○RU	G34	Insert (Grooving / Plunge&Turn) / Previous Description
GMG ○○○○-○○MG	G34, G63, G94	Insert (Grooving / Plunge&Turn)
GMG ○○○○-○○MS	G34	Insert (Grooving / Plunge&Turn)
GMG ○○○○-○○R	G34	Insert (Grooving / Plunge&Turn)
GMG ○○○○-○○RU	G34	Insert (Grooving / Plunge&Turn)
GMGA ○○○○-○○R	G35, G63, G94	Insert (Grooving / Plunge&Turn) / Previous Description
GMGA ○○○○-○○R	G35, G63, G94	Insert (Grooving / Plunge&Turn)
GMM 3014-04	G35	Insert (Grooving / Plunge&Turn)
GMM 3014-15R	G35	Insert (Grooving / Plunge&Turn)
GMM 3014-15RU	G35	Insert (Grooving / Plunge&Turn)
GMM ○○○○-MT	G36, H16	Insert (Grooving / Plunge&Turn)
GMM ○○○○-NB	G36, H16	Insert (Grooving / Plunge&Turn)
GMM ○○○○%L-MT-15D	G36, H16	Insert (Grooving / Plunge&Turn)
GMM ○○○○%L-TK-8D	G36, H16	Insert (Grooving / Plunge&Turn)
GMM ○○○○%L-TMR-6D	H16	Insert (Grooving / Plunge&Turn)
GMM ○○○○-TK	G36, H16	Insert (Grooving / Plunge&Turn)
GMM ○○○○-TMR	H16	Insert (Grooving / Plunge&Turn)
GMM ○○○○-○○	G34, G63, G94	Insert (Grooving / Plunge&Turn) / Previous Description
GMM ○○○○-○○MS	G34	Insert (Grooving / Plunge&Turn) / Previous Description
GMM ○○○○-○○R	G34	Insert (Grooving / Plunge&Turn) / Previous Description
GMM ○○○○-○○V	G62	Insert (Grooving / Plunge&Turn) / Previous Description
GMM ○○○○-○○VR	G62	Insert (Grooving / Plunge&Turn) / Previous Description
GMM ○○○○-○○MS	G34	Insert (Grooving / Plunge&Turn)
GMM ○○○○-○○MW	G34, G63, G94	Insert (Grooving / Plunge&Turn)
GMM ○○○○-○○R	G34	Insert (Grooving / Plunge&Turn)
GMM ○○○○-○○V	G62	Insert (Grooving / Plunge&Turn)
GMM ○○○○-○○VR	G62	Insert (Grooving / Plunge&Turn)
GMN ○(○)	C17, C27, G36, G37, H16	Insert (Grooving / Plunge&Turn)
GMN ○-TK	G36, H16	Insert (Grooving / Plunge&Turn)
GM% ○-TK-8D	G36, H16	Insert (Grooving / Plunge&Turn)
GM% 〇(○)-〇(○)D	G36, H16	Insert (Grooving / Plunge&Turn)
GMGW ○○○○-○○R	C28, G42	Insert (Grooving / Plunge&Turn)
GMGW ○○○○-○○R-HR	C28, G42	Insert (Grooving / Plunge&Turn)
GOMT ○○○○○ER-D	M19	Insert (Milling)
GP-1	K42, K44, K46, P18	Spare Parts (Plug)
GP-2	K42, K43, K44, K45, K46, K47, K48, P18	Spare Parts (Plug)
GS-50	G18, G40, G60, G62, J22, J23, P2	Spare Parts (Screw)
GS-50S	P2	Spare Parts (Screw)
GS 91-○	B87, G19	Insert (Grooving)
GS-4090T%W	P2	Spare Parts (Screw)
GV% ○○○□R	G58	Insert (Grooving)
GV% ○○○□(□)	C27, G58, M155	Insert (Grooving / Previous Description)
GV% ○○○-○○□(□)	C27, G58, M155	Insert (Grooving)
GVF% ○○○□	C27, G91, M153	Insert (Grooving / Previous Description)
GVF% ○○○AA	G85	Insert (Grooving)
GVF% ○○○□R	G91	Insert (Grooving)
GVF% ○○○-○○AA	G85	Insert (Grooving)
GVF% ○○○-○○□	C27, G91, M153	Insert (Grooving)
GVF% ○○○-○○□R	G91	Insert (Grooving)
<b>H</b>		
HA○○ PCLN%12-○○	F72	Boring Bar (AD Bar Interchangeable Head)
HA○○ PDUN%15-○○	F73	Boring Bar (AD Bar Interchangeable Head)
HA○○ PTFN%16-○○	F73	Boring Bar (AD Bar Interchangeable Head)
HA○○ SCLC%09-○○	F74	Boring Bar (AD Bar Interchangeable Head)

# Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
HA○○ SDUC%11-○○	F74	Boring Bar (AD Bar Interchangeable Head)
HF20x53H	M64, P2	Spare Parts (Screw with Coolant Hole)
HF24x60H	M64, P2	Spare Parts (Screw with Coolant Hole)
HH3X6	F88, P2	Spare Parts (Screw)
HH3X12	D32, D33, D34, D35, D36, F88, P2	Spare Parts (Screw)
HH4X12	G89, K49, P3	Spare Parts (Screw)
HH4X16	M37, M38, M45, M59, P2	Spare Parts (Screw)
HH5X15	G64, P2	Spare Parts (Screw)
HH5X16	D23, G26, G38, G39, G40, G41, H14, H18, H19, P2	Spare Parts (Screw)
HH5X20	F75, G92, G93, P2	Spare Parts (Screw)
HH5X25	G26, G38, G39, G40, G41, G92, G93, H14, H18, H19, H23, P2	Spare Parts (Screw)
HH5x30	F75, P2	Spare Parts (Screw)
HH6X12	K49, P2	Spare Parts (Screw)
HH6X20	F75, G21, G63, P2	Spare Parts (Screw)
HH6X25	G20, G26, G38, G42, G61, G94, H14, H18, P2	Spare Parts (Screw)
HH6X30	F75, H23, P2	Spare Parts (Screw)
HH8X25	M28, M49, M76, P3	Spare Parts (Screw)
HH8X25H	M64, M71, P3	Spare Parts (Screw with Coolant Hole)
HH8X35	M97, M103, P3	Spare Parts (Screw)
HH8X40	M97, M103, P3	Spare Parts (Screw)
HH8X50	M97, M103, P3	Spare Parts (Screw)
HH8X55	M103, P3	Spare Parts (Screw)
HH8X65	M97, M103, P3	Spare Parts (Screw)
HH8X70	M103, P3	Spare Parts (Screw)
HH8X80	M103, P3	Spare Parts (Screw)
HH8X85	M103, P3	Spare Parts (Screw)
HH8X100	M103, P3	Spare Parts (Screw)
HH8X110	M103, P3	Spare Parts (Screw)
HH10X25	M147, P3	Spare Parts (Screw)
HH10X30	M25, M49, M55, M76, P3	Spare Parts (Screw)
HH10X30H	M64, M71, P3	Spare Parts (Screw with Coolant Hole)
HH10X30M	M28, P3	Spare Parts (Screw)
HH10X30S	M28, M32, M34, P3	Spare Parts (Screw)
HH10X35	M125, P3	Spare Parts (Screw)
HH10X40	M76, P3	Spare Parts (Screw)
HH12X25	P3	Spare Parts (Screw)
HH12X30	P3	Spare Parts (Screw)
HH12X35	M25, M37, M42, M43, M49, M55, M61, M76, M78, M79, M87, M90, M125, M136, M137, M147, P3	Spare Parts (Screw)
HH12X35H	M64, P3	Spare Parts (Screw with Coolant Hole)
HH12X35M	M28, M32, M34, P3	Spare Parts (Screw)
HH12X40	M78, M79, M90, M97, M103, P3	Spare Parts (Screw)
HH12X55	M103, P3	Spare Parts (Screw)
HH12X65	M97, M103, P3	Spare Parts (Screw)
HH12X80	M103, P3	Spare Parts (Screw)
HH12X85	M103, P3	Spare Parts (Screw)
HH12X100	M103, P3	Spare Parts (Screw)

Description	Page	Category
HH12X110	M103, P3	Spare Parts (Screw)
HH12X120	M103, P3	Spare Parts (Screw)
HH12X130	M103, P3	Spare Parts (Screw)
HH12X140	M103, P3	Spare Parts (Screw)
HH12X150	M103, P3	Spare Parts (Screw)
HH16X35	M136, M137, P3	Spare Parts (Screw)
HH16X40	M78, M79, P3	Spare Parts (Screw)
HH16X45	M76, M87, M90, M103, P3	Spare Parts (Screw)
HH16X52H	M64, P3	Spare Parts (Screw with Coolant Hole)
HH16X65	M101, M103, P3	Spare Parts (Screw)
HH16X90	M101, M103, P3	Spare Parts (Screw)
HH16X110	M103, P3	Spare Parts (Screw)
HH16X130	M103, P3	Spare Parts (Screw)
HH20X40	M78, M79, M103, M125, P3	Spare Parts (Screw)
HH20X55	M87, M103, P3	Spare Parts (Screw)
HH20X75	M103, P3	Spare Parts (Screw)
HH20X90	M101, M103, P3	Spare Parts (Screw)
HH20X110	M101, M103, P3	Spare Parts (Screw)
HH20X120	M103, P3	Spare Parts (Screw)
HH20X140	M103, P3	Spare Parts (Screw)
HH20X150	M103, P3	Spare Parts (Screw)
HH20X170	M103, P3	Spare Parts (Screw)
HH24X40	M103, P3	Spare Parts (Screw)
HH24X60	M103, P3	Spare Parts (Screw)
HH24X75	M103, P3	Spare Parts (Screw)
HH24X90	M101, M103, P3	Spare Parts (Screw)
HH24X110	M101, M103, P3	Spare Parts (Screw)
HH24X120	M103, P3	Spare Parts (Screw)
HH24X140	M103, P3	Spare Parts (Screw)
HH24X150	M103, P3	Spare Parts (Screw)
HH24X170	M103, P3	Spare Parts (Screw)
HPB% ○○○○-○○	F30	2-Edge Tip-Bars (Boring)
HPB% ○○○○-○○NB	F30	2-Edge Tip-Bars (Boring)
HPBT% ○○○○-○○	F30	2-Edge Tip-Bars (Back Boring)
HPFG% ○○○○-○○	G69	2-Edge Tip-Bars (Internal Face Grooving)
HPG% ○○○○-○○	G48	2-Edge Tip-Bars (Internal Grooving)
HPTR ○○○○-○○-○○	J24	2-Edge Tip-Bars (Internal Threading)
HS3X4	F24, F26, F33, F90, P4	Spare Parts (Screw)
HS3X4P	F18, F21, F31, F86, P4	Spare Parts (Screw)
HS3X8	P4	Spare Parts (Screw)
HS3X12	P4	Spare Parts (Screw)
HS3X16	P4	Spare Parts (Screw)
HS4X4	F33, F88, F90, P4	Spare Parts (Screw)
HS4X4P	F18, F21, F31, F86, G49, J26, P4	Spare Parts (Screw)
HS5X5	F88, P4	Spare Parts (Screw)
HS6X4P	F87, G54, P4	Spare Parts (Screw)
HS6X6	F88, P4	Spare Parts (Screw)
HS6X14	F88, P4	Spare Parts (Screw)
HS6X22	F88, P4	Spare Parts (Screw)
HS8X10	N10, P4	Spare Parts (Screw)
HS8X12	N10, P4	Spare Parts (Screw)
HS10X10	F88, P4	Spare Parts (Screw)
HS10X16	N10, P4	Spare Parts (Screw)
HS12X12	N10, P4	Spare Parts (Screw)
HS12X16	N10, P4	Spare Parts (Screw)
HS12X18	N10, P4	Spare Parts (Screw)
HS12X20	N10, P4	Spare Parts (Screw)
HS12X25	N3, P4	Spare Parts (Screw)
HS12X30	N3, N4, P4	Spare Parts (Screw)
HS12X35	N4, P4	Spare Parts (Screw)
HS16X12	N10, P4	Spare Parts (Screw)
HS16X18	N10, P4	Spare Parts (Screw)
HS16X20	N10, P4	Spare Parts (Screw)

T

?

Index



Description	Page	Category
HSB4X8%	<b>E17, E18, E19, E22, E24, E30, P4</b>	Spare Parts (Screw)
<b>J</b>		
JCET ○○○○○○M%-F	<b>B58</b>	Insert (Turning)
JCET ○○○○○○M%-FSF	<b>B58</b>	Insert (Turning)
JCET ○○○○○○%-FSF	<b>B58</b>	Insert (Turning)
JCGT ○○○○○○M%-F	<b>B58</b>	Insert (Turning)
JCGT ○○○○○○%-F	<b>B58</b>	Insert (Turning)
JOMT ○○○○○○ER-D	<b>M19</b>	Insert (Milling)
<b>K</b>		
KFMS%L ○○○○□○○(○)○○(○)-8	<b>G94</b>	Toolholder (Grooving / Plunge&Turn)
KFMS%L ○○○○□○○(○)○○(○)-○	<b>G92, G93</b>	Toolholder (Grooving / Plunge&Turn)
KFTB%L ○○○○○(○)-○S	<b>G95</b>	Blade (Grooving)
KGA%L ○○○○□-○	<b>G21</b>	Toolholder (Grooving)
KGB%L ○○○○□-○○	<b>G15</b>	Toolholder (Grooving)
KGB%L ○○○○□22-○○	<b>G15</b>	Toolholder (Grooving)
KGBA%L ○○○○□-○○	<b>G13</b>	Toolholder (Grooving)
KGBA%L ○○○○□22-○○	<b>G13</b>	Toolholder (Grooving)
KGBA%L ○○○○□22-○○T5	<b>G13</b>	Toolholder (Grooving)
KGBAS%L ○○○○□-○○	<b>G13</b>	Toolholder (Grooving)
KGBAS%L ○○○○□22-○○	<b>G13</b>	Toolholder (Grooving)
KGBAS%L ○○○○□22-○○T5	<b>G13</b>	Toolholder (Grooving)
KGBS%L ○○○○□-○○	<b>G15</b>	Toolholder (Grooving)
KGBS%L ○○○○□22-○○	<b>G15</b>	Toolholder (Grooving)
KGDF%L -○○(○)-○□-C	<b>G75, G76, G77, G78, G79, G80, G81</b>	Blade (Face Grooving)
KGDF%L ○○○○X○○(○)-○□S	<b>G75, G76, G77, G78</b>	Toolholder (Face Grooving)
KGD%L ○T○○-C	<b>G27, G28, G29, H15</b>	Blade (Grooving / Cut-Off)
KGD%L ○○○○-C	<b>G27, G29, G75, G76, G77, G78, H15</b>	Toolholder Body (Grooving / Cut-Off)
KGD%L ○○○○□-○(○)T○○	<b>G26, H14</b>	Toolholder (Grooving / Cut-Off)
KGD%L ○○○○X-○T○○S	<b>G27, H15</b>	Toolholder (Grooving / Cut-Off)
KGDS%L ○○○○-C	<b>G28, G29, G79, G80</b>	Toolholder (Grooving)
KGDS%L ○○○○X-○T○○S	<b>G28</b>	Toolholder (Grooving)
KGH%L ○○○○□-○(○)	<b>G20</b>	Toolholder (Grooving)
KGHS%L ○○○○□-○	<b>G20</b>	Toolholder (Grooving)
KGIAR ○○H	<b>G64</b>	Toolholder (Grooving / Toolholder Body)
KGIAR ○○○○B-○	<b>G64</b>	Toolholder (Grooving)
KGM%L ○○○○□-○	<b>G38, H18</b>	Toolholder (Grooving / Plunge&Turn)
KGM%L ○○○○□-○T○○	<b>G39, H19</b>	Toolholder (Grooving / Plunge&Turn)
KGM%L ○○○○□-○(○)-○○(○)	<b>G38, G104, H18, H26</b>	Toolholder (Grooving / Plunge&Turn)
KGM%L ○○○○□-○(○)	<b>G38, H18</b>	Toolholder (Grooving / Plunge&Turn)
KGMM%L ○○○○□-○	<b>G40</b>	Toolholder (Grooving / Plunge&Turn)
KGMS%L ○○○○□-○	<b>G40</b>	Toolholder (Grooving / Plunge&Turn)
KGMU%L ○○○○□	<b>G41</b>	Toolholder (Grooving / Plunge&Turn)
KGMW%L ○○○○□-○	<b>G42</b>	Toolholder (Grooving / Plunge&Turn)
KIGBA%L ○○○○-○○	<b>G59</b>	Toolholder (Grooving)
KIGH%L ○○○○B-○	<b>G61</b>	Toolholder (Grooving)
KIGM%L ○○○○B-○	<b>G63</b>	Toolholder (Grooving / Plunge&Turn)
KIGM%L ○○○○B-○V	<b>G62</b>	Toolholder (Grooving / Plunge&Turn)
KIGMU%L ○○○○B-○	<b>G63</b>	Toolholder (Grooving / Plunge&Turn)
KITG%L ○○○○T-○○	<b>G60, J23</b>	Toolholder (Grooving / Threading)
KN91%L ○○-○	<b>G19</b>	Toolholder (Grooving)
KNMX ○○○○○○%-L	<b>B26</b>	Insert (Turning)
KPS-42	<b>E42, F68, P8</b>	Spare Parts (Shim)
KPT-32	<b>E43, F69, P8</b>	Spare Parts (Shim)
KPT-42	<b>M59, P8</b>	Spare Parts (Shim)
KTG%L ○○○○□-○○	<b>G18</b>	Toolholder (Grooving)
KTG%L ○○○○□22-○○	<b>G18</b>	Toolholder (Grooving)
KTGF%L ○○○○□-○○□	<b>G16, G104</b>	Toolholder (Grooving)
KTGF%L ○○○○□(□)-○○F	<b>G16</b>	Toolholder (Grooving)
KTKB ○○-○S	<b>H22</b>	Blade (Cut-Off)
KTKB ○○-○SS	<b>H22</b>	Blade (Cut-Off)
KTKB%L ○○-○S	<b>H22</b>	Blade (Cut-Off)
KTKF%L ○○○○□(□)-○○	<b>E12, E48, H8, H26, J18</b>	Toolholder (Back Turning / Cut-Off / Treading)
KTKFS%L ○○○○□-○○□	<b>H10</b>	Toolholder (Cut-Off)
KTKH%L ○○○○□-○S	<b>H24</b>	Toolholder (Cut-Off)

Description	Page	Category
KTKH%L ○○○○□-○T○○S	<b>H24</b>	Toolholder (Cut-Off)
KTKH%L ○○○○□-○(○)-○○○B	<b>H26</b>	Toolholder (Cut-Off)
KTKH%L ○○○○□-○-○○○S	<b>H26</b>	Toolholder (Cut-Off)
KTKTB ○○-○○	<b>H23</b>	Block (Cut-Off)
KTKTBF ○○-○○	<b>H23</b>	Block (Cut-Off)
KTN%L ○○○○□-○○	<b>J16</b>	Toolholder (Threading)
KTNS%L ○○○○□-○○	<b>J16</b>	Toolholder (Threading)
KTT%L ○○○○□-○○	<b>J22</b>	Toolholder (Threading)
KTTXR ○○○○□(□)-○○F	<b>J20</b>	Toolholder (Threading)
KVN-32	<b>D18, P8</b>	Spare Parts (Shim)
<b>L</b>		
LC-4K	<b>F72, P9</b>	Spare Parts (Shim)
LC-32	<b>P9</b>	Spare Parts (Shim)
LC-32N	<b>D8, F76, P9</b>	Spare Parts (Shim)
LC-42	<b>N5, P9</b>	Spare Parts (Shim)
LC-42N	<b>D8, E40, N5, P9</b>	Spare Parts (Shim)
LC-42N%L	<b>F76, P9</b>	Spare Parts (Shim)
LC-42%L	<b>P9</b>	Spare Parts (Shim)
LC-53	<b>P9</b>	Spare Parts (Shim)
LC-53N	<b>D8, P9</b>	Spare Parts (Shim)
LCP025140	<b>F18</b>	Spare Parts (Location Pin)
LD-4K	<b>F73, P9</b>	Spare Parts (Shim)
LD-4K43	<b>F73, P9</b>	Spare Parts (Shim)
LD-32	<b>P9</b>	Spare Parts (Shim)
LD-32N	<b>D11, F77, P9</b>	Spare Parts (Shim)
LD-42	<b>D11, N5, N6, P9</b>	Spare Parts (Shim)
LD-42-20	<b>D11, P9</b>	Spare Parts (Shim)
LD-43	<b>D11, P9</b>	Spare Parts (Shim)
LD-43-20	<b>D11, P9</b>	Spare Parts (Shim)
LGBA-16%LS	<b>G13, G59, N9, P14</b>	Spare Parts (Clamp Set)
LGBA-22%LS	<b>G13, G59, N9, P14</b>	Spare Parts (Clamp Set)
LL-03	<b>P7</b>	Spare Parts (Lock Pin)
LL-03N	<b>D14, P7</b>	Spare Parts (Lock Pin)
LL-03S	<b>P7</b>	Spare Parts (Lock Pin)
LL-03SN	<b>F76, F78, F79, P7</b>	Spare Parts (Lock Pin)
LL-03T	<b>P7</b>	Spare Parts (Lock Pin)
LL-03TN	<b>D14, F78, P7</b>	Spare Parts (Lock Pin)
LL-05C	<b>D19, P7</b>	Spare Parts (Lock Pin)
LL-1	<b>N6, P7</b>	Spare Parts (Lock Pin)
LL-1C	<b>P7</b>	Spare Parts (Lock Pin)
LL-1CN	<b>D19, D37, P7</b>	Spare Parts (Lock Pin)
LL-1D	<b>P7</b>	Spare Parts (Lock Pin)
LL-1DN	<b>D11, F77, P7</b>	Spare Parts (Lock Pin)
LL-1K	<b>F73, P7</b>	Spare Parts (Lock Pin)
LL-1N	<b>D8, D12, D13, D14, D19, D20, E41, F76, F78, F79, N6, P7</b>	Spare Parts (Lock Pin)
LL-2	<b>N5, N7, P7</b>	Spare Parts (Lock Pin)
LL-2C	<b>D37, P7</b>	Spare Parts (Lock Pin)
LL-2K	<b>F72, P7</b>	Spare Parts (Lock Pin)
LL-2N	<b>D8, D12, D13, D14, D19, D20, E40, F76, F80, N5, N7, P7</b>	Spare Parts (Lock Pin)
LL-3	<b>N5, N6, P7</b>	Spare Parts (Lock Pin)
LL-3K	<b>F73, P7</b>	Spare Parts (Lock Pin)
LL-3N	<b>D11, N5, N6, P7</b>	Spare Parts (Lock Pin)
LL-4	<b>D11, P7</b>	Spare Parts (Lock Pin)
LL-5	<b>P7</b>	Spare Parts (Lock Pin)
LL-5N	<b>D8, P7</b>	Spare Parts (Lock Pin)
LNEU ○○○○-○○(-○)	<b>M126</b>	Insert (Milling)
LNEU ○○○○-○○S(-○)	<b>M126</b>	Insert (Milling)
LOF07R	<b>M30</b>	Spare Parts (Cartridge)
LOMU ○○○○○○ER-GH	<b>M14</b>	Insert (Milling)
LOMU ○○○○○○ER-GM	<b>M14</b>	Insert (Milling)
LOMU ○○○○○○ER-SM	<b>M14</b>	Insert (Milling)
LP-2S	<b>D18, P7</b>	Spare Parts (Lock Pin)
LP-6S	<b>D18, P7</b>	Spare Parts (Lock Pin)
LPA-11	<b>E17, E18, E19, P7</b>	Spare Parts (Anchor Pin)

# Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
LPA-13	E17, E18, E19, P7	Spare Parts (Anchor Pin)
LPA-17	E17, E18, E19, P7	Spare Parts (Anchor Pin)
LPF-11	E22, E24, E30, P7	Spare Parts (Anchor Pin)
LPF-13	E22, E24, P7	Spare Parts (Anchor Pin)
LPF-17	E22, E24, P7	Spare Parts (Anchor Pin)
LPF-1113	E30, P7	Spare Parts (Anchor Pin)
LPF-1117	E30, P7	Spare Parts (Anchor Pin)
LR-10C	D19, P9	Spare Parts (Shim)
LR-12C	D19, D37, P9	Spare Parts (Shim)
LR-16C	D37, P9	Spare Parts (Shim)
LR-80	D19, P9	Spare Parts (Shim)
LR-81	D19, P9	Spare Parts (Shim)
LS-03	P4	Spare Parts (Lock Screw)
LS-03N	D14, P4	Spare Parts (Lock Screw)
LS-03S	P4	Spare Parts (Lock Screw)
LS-03SN	D14, F76, F78, F79, P4	Spare Parts (Lock Screw)
LS-05	D19, P4	Spare Parts (Lock Screw)
LS-1	N6, P4	Spare Parts (Lock Screw)
LS-1N	D8, D11, D12, D13, D14, D19, D20, D37, E41, F78, N6, P4	Spare Parts (Lock Screw)
LS-1P	F73, P4	Spare Parts (Lock Screw)
LS-1S	P4	Spare Parts (Lock Screw)
LS-1SN	F76, F77, F79, P4	Spare Parts (Lock Screw)
LS-1T	D37, P4	Spare Parts (Lock Screw)
LS-2	N5, N6, N7, P4	Spare Parts (Lock Screw)
LS-2N	D8, D11, D12, D13, D14, D19, D20, E40, F76, F80, N5, N6, N7, P4	Spare Parts (Lock Screw)
LS-2P	F72, P4	Spare Parts (Lock Screw)
LS-3	D11, P4	Spare Parts (Lock Screw)
LS-3P	F73, P4	Spare Parts (Lock Screw)
LS-4	P4	Spare Parts (Lock Screw)
LS-4N	D8, P4	Spare Parts (Lock Screw)
LS-11	D18, P4	Spare Parts (Lock Screw)
LS-15	D18, P4	Spare Parts (Lock Screw)
LS-32	D12, D13, P9	Spare Parts (Shim)
LS-42	D12, D13, P9	Spare Parts (Shim)
LSD-445R	M37, P12	Spare Parts (Cartridge)
LSE-445R	P12	Spare Parts (Cartridge)
LSE-445SR	M34	Spare Parts (Cartridge)
LSO-445R	M38, P12	Spare Parts (Cartridge)
LSP-1	D8, D11, D12, D13, D14, D19, D20, D37, E41, F76, F77, F78, F79, N6, P7	Spare Parts (Shim Pin)
LSP-2	D8, D11, D12, D13, D14, D19, D20, D37, E40, F76, F80, N5, N6, N7, P7	Spare Parts (Shim Pin)
LSP-2K	F73, P7	Spare Parts (Shim Pin)
LSP-3	D8, P7	Spare Parts (Shim Pin)
LSP-3K	F72, F73, P7	Spare Parts (Shim Pin)
LSP-415R	M45, P12	Spare Parts (Cartridge)
LT-3K	F73, P9	Spare Parts (Shim)
LT-32	N6, P9	Spare Parts (Shim)
LT-32N	D14, E41, F78, N6, P9	Spare Parts (Shim)
LT-32N-20	D14, E41, F78, P9	Spare Parts (Shim)
LT-42	P9	Spare Parts (Shim)
LT-42N	D14, P9	Spare Parts (Shim)
LT-42N-20	D14, P9	Spare Parts (Shim)
LTE-490R	M59, P12	Spare Parts (Cartridge)
LTE-490SR	M58	Spare Parts (Cartridge)
LTK-5	G95, H24, P18	Spare Parts (Wrench)

Description	Page	Category
LTP-10	F73, P17	Spare Parts (Trox Plus Wrench / L-sharp type)
LTP-15	F72, F73, P17	Spare Parts (Trox Plus Wrench / L-sharp type)
LTW-8SS	E39, P17	Spare Parts (Trox Wrench / L-sharp type)
LTW-10S	E12, F24, F27, F28, F29, G70, G71, H8, H10, J18, P17	Spare Parts (Trox Wrench / L-sharp type)
LTW-10SS	E38, P17	Spare Parts (Trox Wrench / L-sharp type)
LTW-15S	G38, H18, P17	Spare Parts (Trox Wrench / L-sharp type)
LTW-20	E23, F71, G38, G39, G40, G62, H18, H19, M156, P17	Spare Parts (Trox Wrench / L-sharp type)
LTW-25	G29, G77	Spare Parts (Trox Wrench / L-sharp type)
LW-1.5	P17	Spare Parts (Hexagon Wrench / L-sharp type)
LW-2	P17	Spare Parts (Hexagon Wrench / L-sharp type)
LW-2.5	P17	Spare Parts (Hexagon Wrench / L-sharp type)
LW-3	P17	Spare Parts (Hexagon Wrench / L-sharp type)
LW-4	P17	Spare Parts (Hexagon Wrench / L-sharp type)
LW-4.5	M60, P17	Spare Parts (Hexagon Wrench / L-sharp type)
LW-5	P17	Spare Parts (Hexagon Wrench / L-sharp type)
LW-6	P17	Spare Parts (Hexagon Wrench / L-sharp type)
LW-8	P17	Spare Parts (Hexagon Wrench / L-sharp type)
LW-10	P17	Spare Parts (Hexagon Wrench / L-sharp type)
LW-14	P17	Spare Parts (Hexagon Wrench / L-sharp type)
LW-17	P17	Spare Parts (Hexagon Wrench / L-sharp type)
LW-19	P17	Spare Parts (Hexagon Wrench / L-sharp type)
LW-32	P9	Spare Parts (Shim)
LW-32N	D20, F79, P9	Spare Parts (Shim)
LW-42	N7, P9	Spare Parts (Shim)
LW-42N	D20, N7, P9	Spare Parts (Shim)
LW-42N <sup>1/2</sup>	F80, P9	Spare Parts (Shim)
LW-42 <sup>1/2</sup>	P9	Spare Parts (Shim)

M		
M3X 8	D22, D23, D25, D26, D27, D28, D29, D30, D31, D33, D34, D35, F81, F82, P4	Spare Parts (Screw)
M3X12	D22, D25, D26, D27, D33, D34, D35, F81, P4	Spare Parts (Screw)
M4X10	D22, D25, D27, D30, D31, P4	Spare Parts (Screw)
MAP-1806	M43	Spare Parts (Cartridge)
MAP-1806M	M87	Spare Parts (Cartridge)
MAP-1806S	M87	Spare Parts (Cartridge)
MAP-2506	M90, M91, P12	Spare Parts (Shim)
MCSE ○○○	M156	End Mill (Chamfering)
MCSE ○○○-○○D	M156	End Mill (Chamfering)
MEA ○○-S○○	M109	End Mill
MEA ○○-S○○-Z○	M109	End Mill
MEA ○○-S○○-○○○	M109	End Mill
MEAL ○○-S○○	M107	End Mill (for Aluminum Machining)
MEB ○○-S○○	M110	End Mill
MEC ○○-S○○-○○	M62, M63	End Mill (MEC)
MEC ○○-S○○-○○T	M62	End Mill (MEC)
MEC ○○-S○○-○○○-○○	M63	End Mill (MEC)
MEC ○○-S○○-○○○-○○T	M63	End Mill (MEC)
MEC ○○-W○○-○○○○	M63	End Mill (MEC)
MEC ○○-W○○-○○○○-H	M63	End Mill (MEC)
MEC ○○○R-○○-○(○)□-M(N)	M64	Face Mill (MEC)
MEC ○○○R-○○-○(○)□□	M64	Face Mill (MEC)
MECH ○○○-S○○-○○-○-○T	M76	End Mill (MECH)
MECH ○○○R-○○-○-○-○T	M76	End Mill (MECH)
MECH ○○○R-○○-○-○-○T-M	M76	Shell Mill (MECH)
MECH ○○○R○○-○-○-○T-BT○○	M77	End Mill (MECH)
MECH ○○○R○○-○-○-○T-BT○○-A	M78, M79	End Mill (MECH)

T

?

Index

Description	Page	Category
MECH ○○○R○○-OT-BT○○SA	<b>M78, M79</b>	End Mill (MECH)
MECH ○○○R○○-OT-F	<b>M78, M79</b>	End Mill (MECH)
MECX ○○-S○○-○○-OT	<b>M70</b>	End Mill (MECX)
MECX ○○-S○○-○○-○○-OT	<b>M70</b>	End Mill (MECX)
MECX ○○○R-○○-○○T-M	<b>M71</b>	Face Mill (MECX)
MEF ○○-S○○	<b>M158</b>	End Mill (Countersinking)
METS ○○-S○○	<b>M160</b>	End Mill (T-Slotting)
METS ○○-S○○-H	<b>M160</b>	End Mill (T-Slotting)
MEW ○○-S○○-○○-OT	<b>M48</b>	End Mill (MEW)
MEW ○○-S○○-○○-○○-OT	<b>M48</b>	End Mill (MEW)
MEW ○○-W○○-○○-OT	<b>M48</b>	End Mill (MEW)
MEW ○○○R-○○-OT-(M)	<b>M49</b>	Face Mill (MEW)
MEY ○○-S○○	<b>M112</b>	End Mill (3-D End Mill)
MEY ○○-S○○-○○	<b>M112</b>	End Mill (3-D End Mill)
MEY ○○-S○○-○○H	<b>M112</b>	End Mill (3-D End Mill)
MEZ ○○-S○○G	<b>M116</b>	End Mill (3-D End Mill)
MEZ ○○-S○○-○○G	<b>M116</b>	End Mill (3-D End Mill)
MEZ ○○-S○○-○○HG	<b>M116</b>	End Mill (3-D End Mill)
MFPN-45	<b>M25</b>	Spare Parts (Shim)
MFPN ○○○○○R-○(○)T	<b>M24</b>	Face Mill (MFPN)
MFPN ○○○○○R-○(○)T-M	<b>M24</b>	Face Mill (MFPN)
MFPN ○○○○○R-S32-OT	<b>M25</b>	End Mill (MFPN)
MFWN-90	<b>M55</b>	Spare Parts (Shim)
MFWN ○○○○○R-○(○)T	<b>M54</b>	Face Mill (MFWN)
MFWN ○○○○○R-○(○)T-M	<b>M54</b>	Face Mill (MFWN)
MFWN ○○○○○R-S○○-OT	<b>M55</b>	Face Mill (MFWN)
MGI ○○○○-1□(□)	<b>M154</b>	End Mill (Grooving for M/C)
MHD ○○S-S○○-C	<b>M95</b>	End Mill (Helical "Plus Mill")
MHD ○○(○)-BT50-A	<b>M100</b>	End Mill (Helical "Plus Mill")
MHD ○○(○)-F	<b>M97, M100, M103</b>	Front Piece "Plus Mill"
MHD ○○(○)-FMA-A	<b>M100</b>	End Mill (Helical "Plus Mill")
MHD ○○-ORF	<b>M103, M152</b>	Front Piece "Plus Mill"
MHD ○○-S○○-A	<b>M96</b>	End Mill (Helical "Plus Mill")
MHD ○○-S○○-A-○○	<b>M96</b>	End Mill (Helical "Plus Mill")
MHD ○○-S○○-B	<b>M96</b>	End Mill (Helical "Plus Mill")
MHD ○○-S○○-C	<b>M95</b>	End Mill (Helical "Plus Mill")
MHD ○○-S○○-SA	<b>M95</b>	End Mill (Helical "Plus Mill")
MHD ○○-S○○-SB	<b>M95</b>	End Mill (Helical "Plus Mill")
MHD ○○-S○○-ORSA	<b>M152</b>	End Mill (Helical "Plus Mill")
MOF ○○○○○R-○○-OT	<b>M28</b>	Face Mill
MOF ○○○○○R-○○-OT-M	<b>M28</b>	Face Mill
MOFX ○○○○○R-○○-○(○)T-SF	<b>M30</b>	Face Mill
MOFX ○○○○○□○○-○(○)T-MSF	<b>M30</b>	Face Mill
MP-1	<b>M25, M43, M49, M55, M76, M77, M79, M87, M90, M91, M97, M101, M112, M125, M136, M137, M144</b>	Spare Parts (Anti-seize Compound)
MRF ○○-S○○	<b>M144</b>	End Mill (Ball-Nose)
MRF ○○-S○○-○○	<b>M144</b>	End Mill (Ball-Nose)
MRFW ○○-S○○	<b>M144</b>	End Mill (Ball-Nose)
MRFW ○○-S○○-○○	<b>M144</b>	End Mill (Ball-Nose)
MRP ○○○R-○○	<b>M147</b>	Face Mill ("Radius Mill")
MRP ○○○R-○○-OT	<b>M147</b>	Face Mill ("Radius Mill")
MRP ○○○-S○○-○○	<b>M146</b>	End Mill (Radius Mill)
MRP ○○○-S○○-○○-OT	<b>M146</b>	End Mill (Radius Mill)
MRP ○○○-S○○-○○-OT-○○	<b>M146</b>	End Mill (Radius Mill)
MRP ○○○-S○○-○○-○○	<b>M146</b>	End Mill (Radius Mill)
MSD-42	<b>M37, P9</b>	Spare Parts (Shim)
MSD 45○○	<b>M37</b>	Face Mill (with Shank)
MSD 45○○-32	<b>M37</b>	Face Mill (with Shank)
MSD 45○○(○)R	<b>M37</b>	Face Mill
MSE 15○○	<b>M45</b>	Face Mill (with Shank)
MSE 15○○-32	<b>M45</b>	Face Mill (with Shank)
MSE-4215	<b>M45, P9</b>	Spare Parts (Shim)
MSE-4245	<b>M33, P9</b>	Spare Parts (Shim)
MSE-4245S	<b>M32, P9</b>	Spare Parts (Shim)
MSE 45○○	<b>M33</b>	Face Mill (with Shank)
MSE 45○○-32	<b>M33</b>	Face Mill (with Shank)
MSE 45○○○R-OT	<b>M32</b>	Face Mill
MSE 45○○○R-OT-M	<b>M32</b>	Face Mill
MSE 45○○○R-OT-M-SF	<b>M34</b>	Face Mill

Description	Page	Category
MSE 45○○○R-OT-SF	<b>M34</b>	Face Mill
MS-FRW1	<b>M120, M121</b>	Spare Parts (Wrench / for MSTA)
MSO 45○○-S	<b>M38</b>	Face Mill (with Shank)
MSO 45○○-S32-09	<b>M39</b>	Face Mill (with Shank)
MSO 45○○○R	<b>M38</b>	Face Mill
MSO 45○○○R-09	<b>M39</b>	Face Mill
MSO 90○○-S32-○○	<b>M61</b>	Face Mill (with Shank)
MSO 90○○○R-○○	<b>M61</b>	Face Mill
MSO 90○○○R-○○-○(○)T	<b>M60</b>	Face Mill
MSO 90○○○R-○○-○(○)T-M	<b>M60</b>	Face Mill
MSO-4T245	<b>M38, P10</b>	Spare Parts (Shim)
MSO-5200	<b>M60, P10</b>	Spare Parts (Shim)
MSP 15○○	<b>M45</b>	Face Mill (with Shank)
MSP 15○○(○)R	<b>M45</b>	Face Mill
MSP-42	<b>M45, P10</b>	Spare Parts (Shim)
MSR ○○○R-○	<b>M90</b>	Face Mill
MSR ○○○R-○M	<b>M90</b>	Face Mill
MSR ○○○R-○-31.75	<b>M90</b>	Face Mill
MSR ○○○R-BT50-○	<b>M91</b>	Face Mill
MSRS 15○○○R-○(○)□	<b>M42</b>	Face Mill
MSRS 15○○○R-○(○)□-M	<b>M42</b>	Face Mill
MSRS 90○○○R-○-○(○)□	<b>M86</b>	Face Mill
MSRS 90○○○R-○-○(○)□-M	<b>M86</b>	Face Mill
MSTA ○○(○)□○○-○(○)T	<b>M120</b>	Slot Mill
MSTA ○○□○○○-○(○)T	<b>M121</b>	Slot Mill
MSTB ○○(○)□□○○○○-OT	<b>M124, M125</b>	Slot Mill
MSTB ○○○○□□○○○○-OT	<b>M124</b>	Slot Mill
MSTC ○○○□□○○○-○○-○○	<b>M130, M132, M134</b>	Slot Mill
MSTC ○○○□□○○○-○○-○(○)T	<b>M130, M131, M132, M133, M134, M135</b>	Slot Mill
MT- ○	<b>K11</b>	Spare Parts (Screw / Insert mounting screw)
MTE-42	<b>M59, P10</b>	Spare Parts (Shim)
MTE 90○○	<b>M59</b>	Face Mill (with Shank)
MTE 90○○-32	<b>M59</b>	Face Mill (with Shank)
MTE 90○○(○)R	<b>M59</b>	Face Mill
MTE 90○○○R-OT-SF	<b>M58</b>	Face Mill
MTES ○○○	<b>M108</b>	End Mill
MTP 90○○	<b>M59</b>	Face Mill (with Shank)
MTPS ○○○	<b>M108</b>	End Mill
MVG ○○○○	<b>M153</b>	End Mill (Ring Grooving for M/C)
MVLN%L ○○○○□-○○	<b>D17</b>	Toolholder (Turning)
MVN-32	<b>D17, P10</b>	Spare Parts (Shim)
MVVNN ○○○○□-○○	<b>D17</b>	Toolholder (Turning)
<b>N</b>		
NDCT ○○○○○○FR	<b>M20</b>	Insert (Milling)
NDCT ○○○○○○TR	<b>M20</b>	Insert (Milling)
NDCT ○○○○○○TRX	<b>M20</b>	Insert (Milling)
NDCW ○○○○○○FRX	<b>C32, M22</b>	Insert (Milling)
NDCW ○○○○○○FRX-NE	<b>C32, M22</b>	Insert (Milling)
NDCW ○○○○○○TR	<b>M20</b>	Insert (Milling)
NDCW ○○○○○○TRX	<b>M20</b>	Insert (Milling)
NDKT ○○○○○○ER-N○	<b>M20</b>	Insert (Milling)
NDKT ○○○○○○ER-V	<b>M19</b>	Insert (Milling)
NDKW ○○○○○○ER	<b>M20</b>	Insert (Milling)
NDMM ○○○○○○ER-N○	<b>M21</b>	Insert (Milling)
NDMM ○○○○○○ER-T	<b>M20</b>	Insert (Milling)
NDMM ○○○○○○ER-SP	<b>M20</b>	Insert (Milling)
NDMT ○○○○○○ER-D	<b>M21</b>	Insert (Milling)
NDMT ○○○○○○ER-DH	<b>M21</b>	Insert (Milling)
NEMT ○○○○○○ER-D	<b>M21</b>	Insert (Milling)
NEMT ○○○○○○ER-DH	<b>M21</b>	Insert (Milling)
<b>O</b>		
OFMR ○○○○○○EN-GT	<b>M15</b>	Insert (Milling)
OFMR ○○○○○○EN-SH	<b>M15</b>	Insert (Milling)
OFMT ○○○○○○EN-GT	<b>M15</b>	Insert (Milling)
OFMT ○○○○○○E□-SH	<b>M15</b>	Insert (Milling)
<b>P</b>		
P-03	<b>D14, P7</b>	Spare Parts (Shim Pin)
P-03S	<b>D14, F76, F78, F79, P7</b>	Spare Parts (Shim Pin)

# Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
PC-1	D8, D11, D12, D13, D14, D19, D20, D37, E41, F76, F77, F78, F79, N6, P18	Spare Parts (Punch)
PC-2	D8, D11, D12, D13, D14, D19, D20, D37, E40, F76, F80, N5, N6, N7, P18	Spare Parts (Punch)
PC-2K	F72, F73	Spare Parts (Punch)
PCLN% □○○○B-○○	F76	Boring Bar / Previous Description
PCLN% □○○○B-○○H	F76	Boring Bar / Previous Description
PCLN% □○○○□-○○	D8	Toolholder (Turning)
PCLNR □○○○□-○○FF	E40	Toolholder (Double Sided Tooling)
PDHN% □○○○□-○○	D11	Toolholder (Turning)
PDJN% □○○○□-○○	D11	Toolholder (Turning)
PDJN% □○○○□-○○U	D11	Toolholder (Turning)
PDUN% □○○○B-○○	F77	Boring Bar / Previous Description
PDUN% □○○○B-○○H	F77	Boring Bar / Previous Description
PH- ○○○○	F33, F90	Sleeve (for Tip-Bars / Previous Description)
PH ○○○○-○○	F33, F90	Sleeve (for Tip-Bars)
PNEU ○○○○ANER-GL	M15	Insert (Milling)
PNMU ○○○○ANER-GH	M15	Insert (Milling)
PNMU ○○○○ANER-GM	M15	Insert (Milling)
PNMU ○○○○ANER-SM	M15	Insert (Milling)
PRGC% □○○○□-○○	D19	Toolholder (Turning)
PRGC% □○○○□-○○BE	D37	Toolholder (Turning)
PRGC% □○○○□-○○BF	D37	Toolholder (Turning)
PRGN% □○○○□-○○	D19	Toolholder (Turning)
PRXC% □○○○□-○○	D19	Toolholder (Turning)
PSB% □○○○-○○NBS	C18, C30, F32	Tip-Bars (Boring)
PSB% □○○○-○○S	F32	Tip-Bars (Boring)
PSBN% □○○○□-○○	D12	Toolholder (Turning)
PSBT% □○○○-○○S	F32	Tip-Bars (Boring)
PSDNN □○○○□-○○	D13	Toolholder (Turning)
PSFG% □○○○-○○S	G69	Tip-Bars (Grooving)
PSG% □○○○-○○S	G48	Tip-Bars (Grooving)
PSH ○○○○(○)-○○(○)	F31, F86, G49, J26	Sleeve (for 2-Edge Tip-Bars)
PSKN% □○○○□-○○	D12	Toolholder (Turning)
PSSN% □○○○□-○○	D13	Toolholder (Turning)
PSTR ○○○○-○○S	J27	Tip-Bars (Threading)
PTFN% □○○○□-○○	D14	Toolholder (Turning)
PTGN% □○○○□-○○	D14	Toolholder (Turning)
PTLNR □○○○□-○○FF	E41	Toolholder (Double Sided Tooling)
PTUN% □○○○B-○○	F78	Boring Bar / Previous Description
PTUN% □○○○B-○○H	F78	Boring Bar / Previous Description
PVLN% □○○○□-○○Q	D18	Toolholder (Turning)
PVVP% □○○○□-○○Q	D18	Toolholder (Turning)
PVVNN □○○○□-○○Q	D18	Toolholder (Turning)
PWLN% □○○○B-○○	F79	Boring Bar / Previous Description
PWLN% □○○○B-○○H	F79	Boring Bar / Previous Description
PWLN% □○○○□-○○	D20	Toolholder (Turning)
<b>R</b>		
RBG ○○K○○○○○	B87	Insert (Turning)
RBG ○○○W	B87	Insert (Turning) / Previous Description
RCGX ○○○○M0-AQ	B58	Insert (Turning)
RCGX ○○○○○P○○○○○	B87	Insert (Turning)
RCGX ○○○○○S○○○○○	B87	Insert (Turning)
RCMT ○○○○M0-BB	B74, D37	Insert (Turning)
RCMX ○○○○M0	B58	Insert (Turning)
RDFG ○○FR	M21	Insert (Milling)
RDHX ○○○○M0T	M21	Insert (Milling)
RDMT ○○○○M0-H	M21	Insert (Milling)
RNGN ○○○○○(K)	B81	Insert (Turning) / Previous Description
RNGN ○○○○○K○○○○○	B81	Insert (Turning)
RNGN ○○○○○S○○○○○	B81	Insert (Turning)
RNGN ○○○○○T○○○○○	B81	Insert (Turning)
RNMG ○○○○○○	B26	Insert (Turning)
RNMN ○○○○○○	C11	Insert (Turning)
RNMN ○○○○○S○○○○○	C11	Insert (Turning)
RPMT ○○○○M0	M21	Insert (Milling)

Description	Page	Category
RPMT ○○○○M0-BB	B74	Insert (Turning)
RPMT ○○○○M0-H	M21	Insert (Milling)
RPMT ○○○○○○	M21	Insert (Milling)
<b>S</b>		
S○○- CH○○	K7, K8, K9, K10	Toolholder ("MagicDrill" / Chamfering Attachment)
S○○- DRS○○○○○	K40	Toolholder ("MagicDrill")
S○○- DRW○○○○○M-○-06	K54, K55	Toolholder ("MagicDrill")
S○○- DRX○○○M-○-○○	K26, K27, K28, K29, K30, K31, K32	Toolholder ("MagicDrill")
S○○- DRZ○○○○○-○○CR	K49	Toolholder ("MagicDrill")
S○○- DRZ○○○○(○○)-○○	K42, K43, K44, K45, K46, K47, K48	Toolholder ("MagicDrill")
S○○□- CCLN%□○○-○○A	F83	Boring Bars
S○○□- CCLN%□○○-○○GX	F82	Boring Bars
S○○□- CDUN%□○○-○○GX	F82	Boring Bars
S○○□- CELN%□○○-○○	F81	Boring Bars
S○○□- CSKN%□○○-○○	F81	Boring Bars
S○○□- CSKN%□○○-○○GX	F82	Boring Bars
S○○□- CSKP%□○○-○○	F68	Boring Bars
S○○□- CTUN%□○○-○○A	F83	Boring Bars
S○○□- CTUP%□○○-○○	F69	Boring Bars
S○○(○)□- KTGFL16	G17	Sleeve Holder (Grooving)
S○○(○)□- KTTXL16	J20	Sleeve Holder (Threading)
S○○□- PCLN%□○○-○○	F76	Boring Bars
S○○□- PDUN%□○○-○○	F77	Boring Bars
S○○□- PTUN%□○○-○○	F78	Boring Bars
S○○□- PWLN%□○○-○○	F79, F80	Boring Bars
S○○(○)□- SCLCL○○	E34	Sleeve Holder (Turning)
S○○□- SCLC%□○○-○○	F36, F96	Boring Bars
S○○□- SCLC%□○○-○○A	F35	Boring Bars (Dynamic Bar)
S○○□- SCLC%□○○-○○E	F36, F95	Boring Bars
S○○□- SCLC%□○○-○○AE	F35	Boring Bars (Dynamic Bar)
S○○□- SCLP%□○○-○○	F41, F96	Boring Bars
S○○□- SCLP%□○○-○○A	F39	Boring Bars (Dynamic Bar)
S○○□- SCLP%□○○-○○E	F41, F95	Boring Bars
S○○□- SDLCL○○	E35	Sleeve Holder (Turning)
S○○□- SDQC%□○○-○○A	F44	Boring Bars (Dynamic Bar)
S○○□- SDUCL○○	E35	Sleeve Holder (Turning)
S○○□- SDUC%□○○-○○	F46, F96	Boring Bars
S○○□- SDUC%□○○-○○A	F43	Boring Bars (Dynamic Bar)
S○○□- SDUC%□○○-○○E	F46, F95	Boring Bars
S○○□- SDZC%□○○-○○	F47, F96	Boring Bars
S○○□- SDZC%□○○-○○A	F45	Boring Bars (Dynamic Bar)
S○○□- SDZC%□○○-○○E	F47, F95	Boring Bars
S○○□- SSKP%□○○-○○	F68	Boring Bars
S○○□- STLB%□○○-○○A	F51	Boring Bars (Dynamic Bar)
S○○□- STLB%□○○-○○AE	F51	Boring Bars (Dynamic Bar)
S○○□- STLC%□○○-○○A	F49	Boring Bars (Dynamic Bar)
S○○□- STLP%□○○-○○A	F51	Boring Bars (Dynamic Bar)
S○○□- STUB%□○○-○○	F52, F97	Boring Bars
S○○□- STUB%□○○-○○E	F52, F95	Boring Bars
S○○□- STUP%□○○-○○	F52, F97	Boring Bars
S○○□- STUP%□○○-○○E	F52, F95	Boring Bars
S○○□- STWP%□○○-○○	F55, J28	Toolholder (Boring / Threading)
S○○□- STWP%□○○-○○E	F55, J28	Toolholder (Boring / Threading)
S○○(○)□- STW%15	F28, J20	Toolholder (for Twin Bars)
S○○□- SVJB%□○○-○○A	F59	Boring Bars (Dynamic Bar)
S○○□- SVJB%□○○-○○E	F62, F95	Boring Bars
S○○□- SVJB%□○○-○○EN	F62, F95	Boring Bars
S○○□- SVJC%□○○-○○A	F59	Boring Bars (Dynamic Bar)
S○○□- SVJC%□○○-○○E	F62, F96	Boring Bars
S○○□- SVJP%□○○-○○A	F59	Boring Bars (Dynamic Bar)
S○○□- SVJP%□○○-○○E	F62, F96	Boring Bars
S○○□- SVNR12N	F25	Toolholder (for System Tip-Bars)
S○○(○)□- SVNR12SN	F25	Toolholder (for System Tip-Bars)
S○○(○)□- SVNR12SXN	F27	Toolholder (for System Tip-Bars)
S○○□- SVNR12XN	F27	Toolholder (for System Tip-Bars)
S○○□- SVPB%□○○-○○A	F59	Boring Bars (Dynamic Bar)
S○○□- SVPB%□○○-○○E	F62, F96	Boring Bars
S○○□- SVPB%□○○-○○EN	F62, F96	Boring Bars
S○○□- SVPC%□○○-○○A	F59	Boring Bars (Dynamic Bar)

T

Index



Description	Page	Category
S00□- SVPC%(00-00)E	F62, F96	Boring Bars
S00□- SVUBL00	E36	Sleeve Holder (Turning)
S00□- SVUCL00	E36	Sleeve Holder (Turning)
S00□- SVUB%(00-00)A	F61	Boring Bars (Dynamic Bar)
S00□- SVUB%(00-00)E	F63, F96	Boring Bars
S00□- SVUB%(00-00)EN	F63, F96	Boring Bars
S00□- SVUC%(00-00)A	F61	Boring Bars (Dynamic Bar)
S00□- SVUC%(00-00)E	F63, F96	Boring Bars
S00□- SVZB%(00-00)A	F61	Boring Bars (Dynamic Bar)
S00□- SVZB%(00-00)E	F63, F96	Boring Bars
S00□- SVZB%(00-00)EN	F63, F96	Boring Bars
S00□- SVZC%(00-00)A	F61	Boring Bars (Dynamic Bar)
S00□- SVZC%(00-00)E	F63, F96	Boring Bars
S00□- SWUB%(00-00)	F67, F97	Boring Bars
S00□- SWUB%(00-00)A	F65	Boring Bars (Dynamic Bar)
S00□- SWUB%(00-00)AE	F65	Boring Bars (Dynamic Bar)
S00□- SWUB%(00-00)E	F67, F96	Boring Bars
S00□- SWUB%(00-00-00)	F67, F97	Boring Bars
S00□- SWUP%(00-00)A	F65	Boring Bars (Dynamic Bar)
S00□- SWUP%(00-00)E	F67, F96	Boring Bars
S00□- SYXP%(00-00)E	F70	Boring Bars
S00□- WWLN%(00-00)E	F80	Boring Bars
SF00- DRC000M-0	K12, K13, K14	Toolholder ("MagicDrill")
SS00- DRC000M-0	K7, K8, K9	Toolholder ("MagicDrill")
SABSR 0000□(□)-00F	E17, E47	Toolholder (Turning)
SABWR 0000□(□)-00F	E18, E19, E47	Toolholder (Turning)
SB-1STR	F52, F53, F56, P5	Spare Parts (Screw)
SB-1TR	F52, F53, F54, F56, P5	Spare Parts (Screw)
SB-2TR	F52, F53, F54, F56, J17, P5	Spare Parts (Screw)
SB-3STR	F41, F55, J28, P5	Spare Parts (Screw)
SB-3TR	F52, F53, F54, F55, J28, P5	Spare Parts (Screw)
SB-3.5TR	J16, J17, P5	Spare Parts (Screw)
SB-4TR	F41, F52, F53, F54, F55, F68, F71, G18, G60, J22, J23, P5	Spare Parts (Screw)
SB-5TR	G38, G39, G40, G62, H18, H19, P5	Spare Parts (Screw)
SB-1635TR	F35, F36, F48, P5	Spare Parts (Screw)
SB-2035TR	F35, F51, F65, F67, P5	Spare Parts (Screw)
SB-2035TRG	M70, P5	Spare Parts (Screw)
SB-2040TR	F36, F67, F70, J17, P5	Spare Parts (Screw)
SB-2040TRG	M112, M116, P5	Spare Parts (Screw)
SB-2042TRG	K26, K28, K30, K32, M70, M71, P5	Spare Parts (Screw)
SB-2045TR	F70, K26, K28, K30, K32, K42, K44, K46, P5	Spare Parts (Screw)
SB-2045TRN	G52, G53, P5	Spare Parts (Screw)
SB-2050TR	E29, E32, E33, E36, F59, F61, F63, F65, F67, F94, J17, P5	Spare Parts (Screw)
SB-2060TR	P5	Spare Parts (Screw)
SB-2080TR	K40, P5	Spare Parts (Screw)
SB-2250TR	F49, K26, K28, K30, K32, M158, P5	Spare Parts (Screw)
SB-2255TR	G52, G53, G54, P5	Spare Parts (Screw)
SB-2260TR	K42, K44, K46, M158, P5	Spare Parts (Screw)
SB-2290TR	K40, P5	Spare Parts (Screw)

Description	Page	Category
SB-2545TR	F35, F36, F37, F45, F51, F65, F67, M62, M63, M104, P5	Spare Parts (Screw)
SB-2555TRG	M62, M63, M64, M76, M77, M79, M112, M116, P5	Spare Parts (Screw)
SB-2560TR	E34, E35, F43, F44, F45, F46, F47, F49, F67, M97, M109, M152, M160, P5	Spare Parts (Screw)
SB-2570TR	E21, E23, E25, E26, E27, E28, E29, E30, E31, E32, E33, E34, E36, E39, F59, F61, F63, G52, G53, G54, K26, K28, K30, K32, K42, K44, K46, P5	Spare Parts (Screw)
SB-3060TR	F39, F51, M39, M104, M146, M156, M160, P5	Spare Parts (Screw)
SB-3060TRG	P5	Spare Parts (Screw)
SB-3065TRP	M49, P5	Spare Parts (Screw)
SB-3070TRG	M112, M116, P5	Spare Parts (Screw)
SB-3080TR	D14, E17, E18, E19, E29, E38, F24, F25, F27, F28, F29, G52, G70, G71, K26, K28, K30, K32, M61, M97, M101, M146, M147, M152, M158, P5	Spare Parts (Screw)
SB-3580TR	F74, P5	Spare Parts (Screw)
SB-3590TRP	M136, M137, P5	Spare Parts (Screw)
SB-3592TR	K55, P5	Spare Parts (Screw)
SB-4050TRN	H10, P5	Spare Parts (Screw)
SB-4060TR	M105, M106, P5	Spare Parts (Screw)
SB-4065TR	E34, F35, F39, F43, F44, F45, F51, F65, F67, M105, M106, M154, P5	Spare Parts (Screw)
SB-4070TRG	M112, M116, P5	Spare Parts (Screw)
SB-4070TRN	M63, M64, M76, M77, M79, P5	Spare Parts (Screw)
SB-4070TRS	G16, G17, J22, P5	Spare Parts (Screw)
SB-4070TRW	G16, J20, P6	Spare Parts (Screw)
SB-4082TPR	M28, P5	Spare Parts (Screw)
SB-4085TR	D8, D10, D12, D16, D20, E20, E23, E25, E26, E27, E28, E35, F46, F47, G52, J17, K27, K28, K30, K32, K42, K44, K46, K48, M110, M146, M147, M152, M154, M160, P5	Spare Parts (Screw)
SB-4090TRP	M49, P5	Spare Parts (Screw)
SB-4590TRWN	E12, H8, J18, P6	Spare Parts (Screw)

# Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
SB-5070TR	M156, P5	Spare Parts (Screw)
SB-5085TR	K43, K44, K45, K46, K47, K48, K49, M61, M107, P5	Spare Parts (Screw)
SB-5090TR	E23, F71, K27, K29, K31, K32, M156, P5	Spare Parts (Screw)
SB-25100TR	K40, P5	Spare Parts (Screw)
SB-40115TR	F94, M146, M147, P5	Spare Parts (Screw)
SB-40125TRN	E30, E31, F59, F61, F63, N8, P5	Spare Parts (Screw)
SB-40140TR	G64, M43, M87, M90, M91, P5	Spare Parts (Screw)
SB-40140TRN	M25, M55, P5	Spare Parts (Screw)
SB-45130TR	M60, P5	Spare Parts (Screw)
SB-50120TR	M146, M147, P5	Spare Parts (Screw)
SB-50120TRS	M28, P5	Spare Parts (Screw)
SB-50140TR	M25, M55, P5	Spare Parts (Screw)
SB-60120TR	G29, G77, K27, K29, K31, K32, K43, K45, K49, M43, M87, M90, M91, M147, P5	Spare Parts (Screw)
SC-30067	M144, P6	Spare Parts (Screw)
SC-35085	M144, P6	Spare Parts (Screw)
SC-40100	M144, P6	Spare Parts (Screw)
SC-50130	M144, P6	Spare Parts (Screw)
SC-60160	M144, P6	Spare Parts (Screw)
SC-60210	M144, P6	Spare Parts (Screw)
SCAC%L ○○○○□-○○	E47	Toolholder (Turning)
SCACR ○○○○□-○○FF	E47	Toolholder (Turning)
SCLC%L ○○○○□-○○	E23, E47	Toolholder (Turning)
SCLC%L ○○○○□(□)-○○FF	E23	Toolholder (Turning)
SCLC%L ○○○○B-○○	F36	Boring Bar / Previous Description
SCLC%L ○○○○B-○○E	F36	Boring Bar / Previous Description
SCLC%L ○○○○B-○○EH	F37	Boring Bar / Previous Description
SCLC%L ○○○○B-○○W	F36	Boring Bar / Previous Description
SCLC%L ○○○○B-○○WH	F37	Boring Bar / Previous Description
SCLNR ○○○○□-○○FF	E38	Toolholder (for Small Double-Sided Tools)
SCLP%L ○○○○B-○○	F41	Boring Bar / Previous Description
SCLP%L ○○○○B-○○E	F41	Boring Bar / Previous Description
SCLP%L ○○○○B-○○EH	F41	Boring Bar / Previous Description
SCLP%L ○○○○B-○○W	F41	Boring Bar / Previous Description
SCLP%L ○○○○B-○○WH	F41	Boring Bar / Previous Description
SCLP%L ○○○○B-○○W-C/O	F41	Boring Bar / Previous Description
SCMT ○○○○○○HQ	B59	Insert (Turning)
SDCN ○○○○AUTN	M11	Insert (Milling)
SDCT ○○○○□-□□	M139	Insert (Milling)
SDCT ○○○○□%L-□□	M139	Insert (Milling)
SDET ○○○○□□-□□	M139	Insert (Milling)
SDET ○○○○□%L-□□	M139	Insert (Milling)
SDJC%L ○○○○□-○○	E25	Toolholder (Turning)
SDJC%L ○○○○□-○○FF	E47	Toolholder (Turning)
SDJCR ○○○○□□-○○-FOO	E20	Toolholder (Goose-neck holder)
SDJC%L ○○○○□(□)-○○FF	E25	Toolholder (Turning)
SDLNR ○○○○□-○○FF	E38	Toolholder (for Small Double-Sided Tools)
SDKN ○○○○AUFN	C32, M11, M22	Insert (Milling)
SDKN ○○○○AUFN-NE	C32, M22	Insert (Milling)
SDKN ○○○○AUTN	M11	Insert (Milling)
SDKR ○○○○AUEN-S	M11	Insert (Milling)
SDKW ○○○○AESN	M15	Insert (Milling)
SDKW ○○○○AETN	M15	Insert (Milling)
SDKW ○○○○○○FN	M15	Insert (Milling)
SDKW ○○○○○○TN	M15	Insert (Milling)
SDLC%L ○○○○□(□)-○○FF	E26, E47	Toolholder (Turning)
SDLP%L ○○○○□-○○FF	E47	Toolholder (Turning)
SDLP%L ○○○○□(□)-○○FF	E28	Toolholder (Turning)
SDMR ○○○○AUER-H	M11	Insert (Milling)
SDMT ○○T○○○C	M16	Insert (Milling)
SDMT ○○○○AESR-H	M15	Insert (Milling)

Description	Page	Category
SDMT ○○○○○○E-K	M16	Insert (Milling)
SDNCN ○○○○□(□)-○○	E27, E47	Toolholder (Turning)
SDNC%L ○○○○□□-○○FF	E27, E47	Toolholder (Turning)
SDUC%L ○○○○B-○○	F46	Boring Bar / Previous Description
SDUC%L ○○○○B-○○E	F46	Boring Bar / Previous Description
SDUC%L ○○○○B-○○W	F46	Boring Bar / Previous Description
SDXC%L ○○○○□(□)-○○	E26, E47	Toolholder (Turning)
SDZC%L ○○○○B-○○	F47	Boring Bar / Previous Description
SDZC%L ○○○○B-○○E	F47	Boring Bar / Previous Description
SE-3070TRP	M136, M137, P6	Spare Parts (Screw)
SE-40050TR	M125, M126, M127, P6	Spare Parts (Screw)
SE-40055TR	M125, M126, M127, P6	Spare Parts (Screw)
SE-40068TR	M125, M126, M127, P6	Spare Parts (Screw)
SE-40080TR	M126, M127, P6	Spare Parts (Screw)
SE-40090TR	M125, M126, M127, P6	Spare Parts (Screw)
SE-40100TR	M126, M127, P6	Spare Parts (Screw)
SE-40120TR	G38, H18, P6	Spare Parts (Screw)
SE-50125TR	G38, H18, P6	Spare Parts (Screw)
SEEN ○○○○AFFN	C32, M22	Insert (Milling)
SEEN ○○○○AFFN-NE	C32, M22	Insert (Milling)
SEEN ○○○○AFFR-W	C32, M11, M22	Insert (Milling)
SEEN ○○○○AFTN	M11	Insert (Milling)
SEEN ○○○○AFTR-W	M11	Insert (Milling)
SEGN ○○○○○○NE	C26	Insert (Milling)
SEKN ○○○○AFFN	M11	Insert (Milling)
SEKN ○○○○AFTN	M11	Insert (Milling)
SEKN ○○○○EFTR	M11	Insert (Milling)
SEKR ○○○○AFEN-S	M11	Insert (Milling)
SEKT ○○○○AFEN-S	M16	Insert (Milling)
SEKW ○○○○AFTN	M15	Insert (Milling)
SEKW ○○○○○○FN	M15	Insert (Milling)
SEKW ○○○○○○TN	M15	Insert (Milling)
SEMM ○○○○○○PESR	M16	Insert (Milling)
SEMR ○○○○AFER-H	M11	Insert (Milling)
SEMT ○○○○○○C	M16	Insert (Milling)
SF%L- ○○○(○)□	G89, G90	Blade (Grooving)
SH- ○○○○	F88	Sleeve (for Boring Bar / Previous Description)
SH ○○○○-○○○	F88	Sleeve (for Boring Bar)
SH- 50150TR	M30, P6	Spare Parts (Cartridge Clump Screw)
SHA ○○○○-○○○	F87, G54	Sleeve (for Automatic Lathe SIGE)
SHA ○○○○.○-○○○	F87, G54	Sleeve (for Automatic Lathe SIGE)
SHC ○○○○-○○	F88	Coolant Sleeve (for Boring Bar)
SHC- ○○○○○○	F88	Coolant Sleeve (for Boring Bar / Previous Description)
SHE ○○○○-○○	F91, K35	Adjustment Sleeve (for MagicDrill)
SHEM ○○○○-○○	F91, K41	Adjustment Sleeve (for MagicDrill)
SHL- ○	F88	Spare Parts (Back Cover)
SIGE%L ○○○○□-EH	G52	Toolholder (Grooving)
SIGE%L ○○○○□-WH	G53	Toolholder (Grooving)
SIGER ○○○○□-WH-90	G54	Toolholder (Grooving / for Automatic Lathe)
SIN%L ○○○○S-○○	J17	Toolholder (Threading)
SIN%L ○○○○S-○○E	J17	Toolholder (Threading)
SIT%L ○○○○-○○	F55, J28	Toolholder (Boring / Threading)
SJLC%L ○○○○B-○○W	F48	Boring Bar / Previous Description
SJS- ○	F89	Coolant Joint
SJZC%L ○○○○B-○○W	F48	Boring Bar / Previous Description
SLT ○○-○○□□□	M122	Insert (Slot Mill MSTA)
SNCN ○○○○XNTN	M12	Insert (Milling)
SNGA ○○○○○○	B29, B82	Insert (Turning)
SNGA ○○○○○○ME	C8	Insert (Turning) / Previous Description
SNGA ○○○○○○ME-T	C8	Insert (Turning) / Previous Description
SNGA ○○○○○○S○○○○○	B82	Insert (Turning)
SNGA ○○○○○○S○○○○○ME	C8	Insert (Turning)
SNGA ○○○○○○S○○○○○MEH	C8	Insert (Turning)
SNGA ○○○○○○S○○○○○MEP	C8	Insert (Turning)
SNGA ○○○○○○S○○○○○MET	C8	Insert (Turning)
SNGA ○○○○○○T○○○○○	B82	Insert (Turning)
SNGA ○○○○○○T○○○○○ME	C8	Insert (Turning)

T

?

Index

Description	Page	Category
SNGG ○○○○○○%-25R	<b>B29</b>	Insert (Turning)
SNGG ○○○○○○%-B/C	<b>B29</b>	Insert (Turning)
SNGN ○○○○○○	<b>B82, B83</b>	Insert (Turning) / Previous Description
SNGN ○○○○○○S○○○○○	<b>B82</b>	Insert (Turning)
SNGN ○○○○○○T○○○○○	<b>B82, B83</b>	Insert (Turning / Milling)
SNGN ○○○○○○-T○○	<b>B82</b>	Insert (Turning) / Previous Description
SNGX ○○○○○○T○○○○○	<b>B83</b>	Insert (Turning)
SNKN ○○○○XNTN	<b>M12</b>	Insert (Milling)
SNMA ○○○○○○	<b>B29</b>	Insert (Turning)
SNMA ○○○○○○S○○○○○	<b>B82</b>	Insert (Turning)
SNMA ○○○○○○-T○○	<b>B82</b>	Insert (Turning) / Previous Description
SNMF ○○○○XNTN	<b>M12</b>	Insert (Milling)
SNMF ○○○○○○-21	<b>B74, D38, F71</b>	Insert (Turning)
SNMG ○○○○○○	<b>B27</b>	Insert (Turning)
SNMG ○○○○○○C	<b>B29</b>	Insert (Turning)
SNMG ○○○○○○GC	<b>B29</b>	Insert (Turning)
SNMG ○○○○○○HK	<b>B27</b>	Insert (Turning)
SNMG ○○○○○○HQ	<b>B27</b>	Insert (Turning)
SNMG ○○○○○○HS	<b>B27</b>	Insert (Turning)
SNMG ○○○○○○HT	<b>B27</b>	Insert (Turning)
SNMG ○○○○○○MQ	<b>B28</b>	Insert (Turning)
SNMG ○○○○○○MS	<b>B28</b>	Insert (Turning)
SNMG ○○○○○○MU	<b>B28</b>	Insert (Turning)
SNMG ○○○○○○PH	<b>B28</b>	Insert (Turning)
SNMG ○○○○○○PS	<b>B27</b>	Insert (Turning)
SNMG ○○○○○○PT	<b>B27</b>	Insert (Turning)
SNMG ○○○○○○%-C	<b>B29</b>	Insert (Turning)
SNMG ○○○○○○XP	<b>B28</b>	Insert (Turning)
SNMG ○○○○○○XQ	<b>B28</b>	Insert (Turning)
SNMG ○○○○○○XS	<b>B28</b>	Insert (Turning)
SNMG ○○○○○○ZS	<b>B29</b>	Insert (Turning)
SNMM ○○○○○○PX	<b>B28</b>	Insert (Turning)
SNMN ○○○○○○	<b>B29, B83, C11, M12</b>	Insert (Turning / Milling)
SNMN ○○○○○○S○○○○○	<b>C11</b>	Insert (Turning)
SNMN ○○○○○○T○○○○○	<b>B83</b>	Insert (Turning)
SOKN 13T3AXFN	<b>M11</b>	Insert (Milling)
SOKN 13T3AXFN-NE	<b>C32, M22</b>	Insert (Milling)
SOKN 13T3AXTN	<b>M11</b>	Insert (Milling)
SOKR 13T3AXEN-J	<b>M11</b>	Insert (Milling)
SOMT 0903AXEN-J	<b>M16</b>	Insert (Milling)
SOMW 0903AXFN	<b>M16</b>	Insert (Milling)
SOMW 0903AXTN	<b>M16</b>	Insert (Milling)
SP-2D	<b>D14, P18</b>	Spare Parts (Spring)
SP-3D	<b>D8, D10, D12, D20, P18</b>	Spare Parts (Spring)
SP-5	<b>G64, P18</b>	Spare Parts (Spring)
SP-5D	<b>D16, P18</b>	Spare Parts (Spring)
SP-6	<b>G15, G20, G21, G61, P18</b>	Spare Parts (Spring)
SP-8	<b>G19, P18</b>	Spare Parts (Spring)
SP3X4	<b>F24, F25, F27, P6</b>	Spare Parts (Screw)
SP3X6	<b>M38, P6</b>	Spare Parts (Screw)
SP3X8	<b>D38, E42, E43, J16, J17, M33, M37, M45, M59, N9, P6</b>	Spare Parts (Screw)
SP3X10	<b>F68, F69, P6</b>	Spare Parts (Screw)
SP4X9	<b>M32, P6</b>	Spare Parts (Screw)
SP8X35	<b>M32, P6</b>	Spare Parts (Clump Bolt for BT50 Arbor)
SP-129	<b>D34, D35, P10</b>	Spare Parts (Shim)
SP-130A	<b>P11</b>	Spare Parts (Shim)
SP-141	<b>D25, D30, D31, D34, D35, P10</b>	Spare Parts (Shim)
SP-141P	<b>F81, F82, P11</b>	Spare Parts (Shim)
SP-143	<b>D25, D34, D35, P10</b>	Spare Parts (Shim)
SP-143P	<b>F81, P11</b>	Spare Parts (Shim)
SP-148	<b>D34, D35, P10</b>	Spare Parts (Shim)
SP-162	<b>D25, D30, D31, P10</b>	Spare Parts (Shim)
SP-210A	<b>F83, P11</b>	Spare Parts (Shim)

Description	Page	Category
SP-219	<b>D36, P10</b>	Spare Parts (Shim)
SP-221	<b>D26, P10</b>	Spare Parts (Shim)
SP-223	<b>D26, P10</b>	Spare Parts (Shim)
SP-230P	<b>P11</b>	Spare Parts (Shim)
SP-341P	<b>F81, P11</b>	Spare Parts (Shim)
SP-342	<b>D23, P10</b>	Spare Parts (Shim)
SP-420A	<b>F83, P11</b>	Spare Parts (Shim)
SP-429	<b>D32, P10</b>	Spare Parts (Shim)
SP-441	<b>D22, D28, P10</b>	Spare Parts (Shim)
SP-441P	<b>F82, P11</b>	Spare Parts (Shim)
SP-443	<b>D22, P10</b>	Spare Parts (Shim)
SP-443P	<b>P11</b>	Spare Parts (Shim)
SP-454	<b>D22, P10</b>	Spare Parts (Shim)
SP-521	<b>D29, P11</b>	Spare Parts (Shim)
SP-521P	<b>F82, P11</b>	Spare Parts (Shim)
SP-523	<b>P11</b>	Spare Parts (Shim)
SP-523P	<b>P11</b>	Spare Parts (Shim)
SP-541	<b>D29, P11</b>	Spare Parts (Shim)
SP-543	<b>P11</b>	Spare Parts (Shim)
SP-826	<b>D33, P11</b>	Spare Parts (Shim)
SP-829	<b>D33, P11</b>	Spare Parts (Shim)
SP-841	<b>D27, D33, P11</b>	Spare Parts (Shim)
SP-843	<b>D27, D33, P11</b>	Spare Parts (Shim)
SP-849	<b>D33, P11</b>	Spare Parts (Shim)
SP-861	<b>D27, P11</b>	Spare Parts (Shim)
SPCN ○○○○EDTR	<b>M12</b>	Insert (Milling)
SPCN ○○○○EETR1	<b>M12</b>	Insert (Milling)
SPCN ○○○○XPTR	<b>M12</b>	Insert (Milling)
SPCT ○○T○○○○□-□□	<b>M138</b>	Insert (Milling)
SPCT ○○T○○○○□%-□□	<b>M138</b>	Insert (Milling)
SPEN ○○○○EESR	<b>M12</b>	Insert (Milling)
SPET ○○T○○○○□%-□□	<b>M138</b>	Insert (Milling)
SPGH ○○○○○○%	<b>B59</b>	Insert (Turning)
SPGN ○○○○○○	<b>B59, B86, C26, M12</b>	Insert (Turning / Milling)
SPGN ○○○○○○NE	<b>C26</b>	Insert (Turning)
SPGN ○○○○○○S○○○○○	<b>B86</b>	Insert (Turning)
SPGN ○○○○○○T○○○○○	<b>B86</b>	Insert (Turning)
SPGR ○○○○○○%	<b>B59</b>	Insert (Turning)
SPKN ○○○○EDFR	<b>M12</b>	Insert (Milling)
SPKN ○○○○EDT%	<b>M12</b>	Insert (Milling)
SPKN ○○○○XETR	<b>M12</b>	Insert (Milling)
SPKN ○○○○XPFR	<b>M12</b>	Insert (Milling)
SPKN ○○○○XPT%	<b>M12</b>	Insert (Milling)
SPKR ○○○○EDER-S	<b>M12</b>	Insert (Milling)
SPMN ○○○○○○	<b>B59, M12</b>	Insert (Turning / Milling)
SPMR ○○○○EDER-H	<b>M12</b>	Insert (Milling)
SPMR ○○○○○○	<b>B59</b>	Insert (Turning)
SPMR ○○○○○○G	<b>B59</b>	Insert (Turning)
SPMT ○○○○EDER-NB○	<b>M16</b>	Insert (Milling)
SPMT ○○○○EDER-NB○P	<b>M17</b>	Insert (Milling)
SPMT ○○○○□□□□-NB○□	<b>M16</b>	Insert (Milling)
SPMT ○○○○□□□□-V	<b>M17</b>	Insert (Milling)
SPMT ○○○○○○EN-NB○	<b>M17</b>	Insert (Milling)
SPMT ○○○○○○EN-NB○P	<b>M17</b>	Insert (Milling)
SPMT ○○○○○○EN-V	<b>M17</b>	Insert (Milling)
SPMT ○○○○○○E-Z	<b>M17</b>	Insert (Milling)
SP-RC	<b>D38, P11</b>	Spare Parts (Shim)
SPW-6045	<b>M60, P6</b>	Spare Parts (Screw)
SPW-7050	<b>M25, M55, P6</b>	Spare Parts (Screw)
SRCP% ○○○○B-○○-A○○	<b>F71</b>	Boring Bar (for Bearing Machining)
SS-4N	<b>E30, E31, F59, F61, F63, N8, P6</b>	Spare Parts (Shim Screw)
SSKP% ○○○○B-○○	<b>F68</b>	Boring Bar / Previous Description
STGC% ○○○○□-○○	<b>E29</b>	Toolholder (Turning)
STGP% ○○○○□-○○	<b>E29</b>	Toolholder (Turning)
STLNR ○○○○□-○○FF	<b>E39</b>	Toolholder (for Small Double-Sided Tools)
STUB% ○○○○B-○○	<b>F52</b>	Boring Bar / Previous Description
STUB% ○○○○B-○○E	<b>F52</b>	Boring Bar / Previous Description
STUB% ○○○○B-○○W	<b>F53</b>	Boring Bar / Previous Description
STUP% ○○○○B-○○	<b>F52</b>	Boring Bar / Previous Description
STUP% ○○○○B-○○E	<b>F52</b>	Boring Bar / Previous Description
STUP% ○○○○B-○○EH	<b>F54</b>	Boring Bar / Previous Description
STUP% ○○○○B-○○W	<b>F53</b>	Boring Bar / Previous Description
STUP% ○○○○B-○○WH	<b>F54</b>	Boring Bar / Previous Description

Description	Page	Category
STUP%L ○○○○B-○○W-○/○	F53	Boring Bar / Previous Description
STW%L ○○○○□-15	F28, G70	Toolholder (for Twin Bars)
STWSR ○○○○□(□)-15T	F29, G71	Toolholder (for Twin Bars)
STXB%L ○○○○B-○○W	F56	Boring Bar / Previous Description
STXP%L ○○○○B-○○W	F56	Boring Bar / Previous Description
STZB%L ○○○○B-○○W	F56	Boring Bar / Previous Description
SV-60136R	M58, P6	Spare Parts (Screw)
SV-60136TR	M34, P6	Spare Parts (Screw)
SVJB%L ○○○○□-○○	E30	Toolholder (Turning)
SVJB%L ○○○○□-○○F	E48	Toolholder (Turning)
SVJB%L ○○○○□-○○N	E30	Toolholder (Turning)
SVJB%L ○○○○□-○○FF	E30	Toolholder (Turning)
SVJB%L ○○○○B-○○E	F62	Boring Bar / Previous Description
SVJC%L ○○○○B-○○E	F62	Boring Bar / Previous Description
SVJP%L ○○○○B-○○E	F62	Boring Bar / Previous Description
SVJP%L ○○○○□(□)-○○FF	E32	Toolholder (Turning)
SVLP%L ○○○○□-○○F	E48	Toolholder (Turning)
SVLPR ○○○○□-○○-F○○	E21	Toolholder (Goose-neck holder)
SVLP%L ○○○○□(□)-○○FF	E32, E48	Toolholder (Turning)
SVNR ○○○○□-12N	F24	Toolholder (for System Tip-Bars)
SVN-32	F94, P12	Spare Parts (Shim)
SVN-32N	E30, E31, F59, F61, F63, N8, P12	Spare Parts (Shim)
SVNSR ○○○○□-12-○○N	F24	Toolholder (for System Tip-Bars)
SVNSR ○○○○□-12-○○XN	F27	Toolholder (for System Tip-Bars)
SVPB%L ○○○○□(□)-○○	E31, E48	Toolholder (Turning)
SVPB%L ○○○○□-○○N	E31	Toolholder (Turning)
SVPP%L ○○○○□-○○	E33, E48	Toolholder (Turning)
SVPPR ○○○○□(□)-○○FF	E33	Toolholder (Turning)
SVQB%L ○○○○B-○○E	F62	Boring Bar / Previous Description
SVQC%L ○○○○B-○○E	F62	Boring Bar / Previous Description
SVUB%L ○○○○B-○○E	F63	Boring Bar / Previous Description
SVUC%L ○○○○B-○○E	F63	Boring Bar / Previous Description
SVVBN ○○○○□(□)-○○	E31, E48	Toolholder (Turning)
SVVBN ○○○○□-○○N	E31	Toolholder (Turning)
SWUB%L ○○○○B-○○	F67	Boring Bar / Previous Description
SWUB%L ○○○○B-○○E	F67	Boring Bar / Previous Description
SWUB%L ○○○○B-○○W	F67	Boring Bar / Previous Description
SWUB%L ○○○○B-○○W-○/○	F67	Boring Bar / Previous Description
SWUB%L ○○○○B-○○-○○	F67	Boring Bar / Previous Description
SWUP%L ○○○○B-○○E	F67	Boring Bar / Previous Description
SWUP%L ○○○○B-○○W	F67	Boring Bar / Previous Description
SWUP%L ○○○○B-○○W-○/○	F67	Boring Bar / Previous Description
<b>T</b>		
T63H- C○○-○○(○)	N10	Toolholder (HSK Tooling)
T63H- KGBA%L-16	N9	Grooving (HSK Tooling)
T63H- KGBA%L-22-○○	N9	Grooving (HSK Tooling)
T63H- KTRN-○○	N9	Threading (HSK Tooling)
T63H- N○○-○○(○)	N10	Toolholder (HSK Tooling)
T63H- PCLN%L-DX12	N5	Toolholder (HSK Tooling)
T63H- PCMNN-□12	N5	Toolholder (HSK Tooling)
T63H- PDJN%L-DX15	N5	Toolholder (HSK Tooling)
T63H- PDNNN-□15	N6	Toolholder (HSK Tooling)
T63H- PTGN%L-DX16	N6	Toolholder (HSK Tooling)
T63H- PVLN%L-DX08	N7	Toolholder (HSK Tooling)
T63H- S2020R-105T	N4	Toolholder (HSK Tooling)
T63H- S2525-○○(○)F	N4	Toolholder (HSK Tooling)
T63H- S2525%L-○○○	N3	Toolholder (HSK Tooling)
T63H- SVLB%L-DX16N	N8	Toolholder (HSK Tooling)
T63H- SVVBN-□16N	N8	Toolholder (HSK Tooling)
T63H- WTENN-□16	N6	Toolholder (HSK Tooling)
T63H- WWMNN-□08	N7	Toolholder (HSK Tooling)
T100H- C○○-○○(○)	N10	Toolholder (HSK Tooling)
T100H- N○○-○○(○)	N10	Toolholder (HSK Tooling)
T100H- S2525-○○○F	N4	Toolholder (HSK Tooling)
T100H- S2525R-○○○T	N4	Toolholder (HSK Tooling)
T100H- S2525%L-○○○	N3	Toolholder (HSK Tooling)
TBET ○○○○○(○)M%L	B60	Insert (Turning)
TBGN ○○○○○○	B86, C16	Insert (Turning)
TBGN ○○○○○○S○○○○○	B86	Insert (Turning)
TBGN ○○○○○○T○○○○○	B86, C16	Insert (Turning)
TBGT ○○○○○○CF	B60	Insert (Turning)
TBGT ○○○○○○(○)M%L	B60	Insert (Turning)
TBGT ○○○○○○M-CF	B60	Insert (Turning)

Description	Page	Category
TBGT ○○○○○○MP-CF	B60	Insert (Turning)
TBGT ○○○○○○(○)%L	B60	Insert (Turning)
TBGW ○○○○○○	B60, C23	Insert (Turning)
TBGW ○○○○○○NE	C23	Insert (Turning)
TBMT ○○○○○○	C23	Insert (Turning)
TBMT ○○○○○○DP	B60	Insert (Turning)
TBMT ○○○○○○NE	C23	Insert (Turning)
TCET ○○○○○○(○)F%L-USF	B61	Insert (Turning)
TCET ○○○○○○(○)MF%L-USF	B61	Insert (Turning)
TCGN ○○○○○○	B62, B86	Insert (Turning)
TCGN ○○○○○○T○○○○○	B86	Insert (Turning)
TCGR ○○○○○○%L-F	B62	Insert (Turning)
TCGT ○○○○○○E%L-U	B61	Insert (Turning)
TCGT ○○○○○○(○)F%L-U	B61	Insert (Turning)
TCGT ○○○○○○ME%L-U	B61	Insert (Turning)
TCGT ○○○○○○(○)MF%L-U	B61	Insert (Turning)
TCGT ○○○○○○%L-A3	B61	Insert (Turning)
TCGW ○○○○○○	B62, C23	Insert (Turning)
TCGW ○○○○○○NE	C23	Insert (Turning)
TCGW ○○○○○○SE	C23	Insert (Turning)
TCMT ○○○○○○	C23	Insert (Turning)
TCMT ○○○○○○HQ	B60	Insert (Turning)
TCMT ○○○○○○NE	C23	Insert (Turning)
TCMT ○○○○○○SE	C23	Insert (Turning)
TEEN ○○○○PTFR	C32, M22	Insert (Milling)
TEEN ○○○○PTFR-NE	C32, M22	Insert (Milling)
TEEN ○○○○PTTR	M13	Insert (Milling)
TEKN ○○○○PTFR	C32, M13, M22	Insert (Milling)
TEKN ○○○○PTFR-NE	C32, M22	Insert (Milling)
TEKN ○○○○PTTR	M13	Insert (Milling)
TEKR ○○○○PTFR-S	M13	Insert (Milling)
TEMR ○○○○PTFR-H	M13	Insert (Milling)
TEMT ○○○○○○-AQ	M17	Insert (Milling)
TG ○○%L○○○	G18, G60	Insert (Grooving)
TGF ○○%L○○○-○○○	C27, G17	Insert (Grooving)
TH-3L	M136, M137	Spare Parts (Wrench)
TH-4	M30, M37, M38, M45, M59, P18	Spare Parts (Hexagon Wrench / T-sharp type)
TH8X15	M37, M38, M45, P6	Spare Parts (Screw)
TKN ○(○)	H21	Insert (Cut-Off)
TKN ○(○)-P	H21	Insert (Cut-Off)
TK%L ○(○)	H21	Insert (Cut-Off)
TK%L ○(○)-P	H21	Insert (Cut-Off)
TKF ○○L○○○-ASR	C29, E16	Insert (Grooving / Turning)
TKF ○○%L○○○-AS	C29, E16	Insert (Grooving / Turning)
TKF ○○%L○○○-NB(○)	C29, E16, H6, H7	Insert (Grooving / Turning)
TKF ○○%L○○○-NB-○○DR	H6, H7	Insert (Cut-Off)
TKF ○○%L○○○-S	H6, H7	Insert (Cut-Off)
TKF ○○%L○○○-S-○○DR	H6, H7	Insert (Cut-Off)
TKF ○○%L○○○-T	H6, H7	Insert (Cut-Off)
TKF ○○%L○○○-T-○○DR	H6, H7	Insert (Cut-Off)
TKFB ○○L○○○○MR	B75	Insert (Back turning)
TKFB ○○R○○○○○M	B75	Insert (Back turning)
TKFS ○○%L○○○-S	H11	Insert (Cut-Off)
TKFT 12%L□○○○○(○)	J18	Insert (Threading)
TN-32	J16, J17, N9, P12	Spare Parts (Shim)
TN-43	J16, J17, N9, P12	Spare Parts (Shim)
TNEG ○○○○○○%L-SSF	B35	Insert (Turning)
TNGA ○○○○○○	B34, B84, C9	Insert (Turning)
TNGA ○○○○○○ME	C8	Insert (Turning) / Previous Description
TNGA ○○○○○○ME-T	C8	Insert (Turning) / Previous Description
TNGA ○○○○○○SE	C8	Insert (Turning) / Previous Description
TNGA ○○○○○○SE-T	C9	Insert (Turning) / Previous Description
TNGA ○○○○○○S○○○○○	B84, C9	Insert (Turning)
TNGA ○○○○○○S○○○○○ME	C8	Insert (Turning)
TNGA ○○○○○○S○○○○○MEH	C8	Insert (Turning)
TNGA ○○○○○○S○○○○○MEP	C8	Insert (Turning)
TNGA ○○○○○○S○○○○○MET	C8	Insert (Turning)
TNGA ○○○○○○S○○○○○SE	C8	Insert (Turning)
TNGA ○○○○○○S○○○○○SET	C9	Insert (Turning)
TNGA ○○○○○○-T○○	B84	Insert (Turning) / Previous Description

T

Index



Description	Page	Category
TNGA ○○○○○○T○○○○○	<b>B84</b>	Insert (Turning)
TNGA ○○○○○○T○○○○○ME	<b>C8</b>	Insert (Turning)
TNGA ○○○○○○T○○○○○SE	<b>C8</b>	Insert (Turning)
TNGG ○○○○○○AH	<b>B34</b>	Insert (Turning)
TNGG ○○○○○○DP	<b>B30</b>	Insert (Turning)
TNGG ○○○○○○FP-TK	<b>B33</b>	Insert (Turning)
TNGG ○○○○○○TK	<b>B33</b>	Insert (Turning)
TNGG ○○○○○○%L	<b>B35</b>	Insert (Turning)
TNGG ○○○○○○%L-25R	<b>B35</b>	Insert (Turning)
TNGG ○○○○○○%L-A3	<b>B34</b>	Insert (Turning)
TNGG ○○○○○○%L-B/C	<b>B35</b>	Insert (Turning)
TNGG ○○○○○○%L-S	<b>B35</b>	Insert (Turning)
TNGM ○○○○○○BB○	<b>C9</b>	Insert (Turning) / Previous Description
TNGM ○○○○○○S○○○○○BB○	<b>C9</b>	Insert (Turning)
TNGN ○○○○○○	<b>B84</b>	Insert (Turning) / Previous Description
TNGN ○○○○○○S○○○○○	<b>B84</b>	Insert (Turning)
TNGN ○○○○○○-T○○	<b>B84</b>	Insert (Turning) / Previous Description
TNGN ○○○○○○T○○○○○	<b>B84</b>	Insert (Turning)
TNGU ○○○○○○ME%-U	<b>B44</b>	Insert (Turning)
TNGU ○○○○○○(○)MF%-F	<b>B44</b>	Insert (Turning)
TNGU ○○○○○○(○)MF%-U	<b>B44</b>	Insert (Turning)
TNMA ○○○○○○	<b>B34</b>	Insert (Turning)
TNMG ○○○○○○	<b>B31</b>	Insert (Turning)
TNMG ○○○○○○AH	<b>B34</b>	Insert (Turning)
TNMG ○○○○○○C	<b>B34</b>	Insert (Turning)
TNMG ○○○○○○CQ	<b>B30</b>	Insert (Turning)
TNMG ○○○○○○CS	<b>B30</b>	Insert (Turning)
TNMG ○○○○○○DP	<b>B30</b>	Insert (Turning)
TNMG ○○○○○○GC	<b>B34</b>	Insert (Turning)
TNMG ○○○○○○GP	<b>B30</b>	Insert (Turning)
TNMG ○○○○○○GS	<b>B30</b>	Insert (Turning)
TNMG ○○○○○○GT	<b>B31</b>	Insert (Turning)
TNMG ○○○○○○GU	<b>B33</b>	Insert (Turning)
TNMG ○○○○○○HK	<b>B30</b>	Insert (Turning)
TNMG ○○○○○○HQ	<b>B30</b>	Insert (Turning)
TNMG ○○○○○○HS	<b>B31</b>	Insert (Turning)
TNMG ○○○○○○HT	<b>B31</b>	Insert (Turning)
TNMG ○○○○○○HU	<b>B33</b>	Insert (Turning)
TNMG ○○○○○○MQ	<b>B33</b>	Insert (Turning)
TNMG ○○○○○○MS	<b>B33</b>	Insert (Turning)
TNMG ○○○○○○MU	<b>B33</b>	Insert (Turning)
TNMG ○○○○○○PH	<b>B32</b>	Insert (Turning)
TNMG ○○○○○○PS	<b>B31</b>	Insert (Turning)
TNMG ○○○○○○PT	<b>B31</b>	Insert (Turning)
TNMG ○○○○○○%L-C	<b>B35</b>	Insert (Turning)
TNMG ○○○○○○%L-ST	<b>B33</b>	Insert (Turning)
TNMG ○○○○○○TK	<b>B33</b>	Insert (Turning)
TNMG ○○○○○○XF	<b>B32</b>	Insert (Turning)
TNMG ○○○○○○XP	<b>B32</b>	Insert (Turning)
TNMG ○○○○○○XP-T	<b>B32</b>	Insert (Turning)
TNMG ○○○○○○XQ	<b>B32</b>	Insert (Turning)
TNMG ○○○○○○XS	<b>B32</b>	Insert (Turning)
TNMG ○○○○○○ZS	<b>B34</b>	Insert (Turning)
TNMM ○○○○○○M	<b>C20</b>	Insert (Turning)
TNMM ○○○○○○M-NE	<b>C20</b>	Insert (Turning)
TNMM ○○○○○○M-SE	<b>C20</b>	Insert (Turning)
TNMM ○○○○○○PX	<b>B32</b>	Insert (Turning)
TNMN ○○○○○○	<b>C11</b>	Insert (Turning)
TNMN ○○○○○○S○○○○○	<b>C11</b>	Insert (Turning)
TNN ○○E%L○○(○)NPT	<b>J10</b>	Insert (Threading / Previous description)
TNN ○○E%L○○PT	<b>J10</b>	Insert (Threading / Previous description)
TNN ○○E%L○○PT-TS	<b>J10</b>	Insert (Threading / Previous description)
TNN ○○E%L○○UN	<b>J8</b>	Insert (Threading / Previous description)
TNN ○○E%L○○W	<b>J8</b>	Insert (Threading / Previous description)
TNN ○○E%L○○W-TS	<b>J8</b>	Insert (Threading / Previous description)
TNN ○○E%L○○M	<b>J6</b>	Insert (Threading / Previous description)
TNN ○○E%L○○M02	<b>J6</b>	Insert (Threading / Previous description)
TNN ○○E%L○○M-TS	<b>J6</b>	Insert (Threading / Previous description)
TNN ○○E%L○○TR	<b>J14</b>	Insert (Threading / Previous description)
TNN ○○E%L○○○	<b>J12, J14</b>	Insert (Threading / Previous description)
TNN ○○E%L○○○-TS	<b>J12</b>	Insert (Threading / Previous description)
TNN ○○E%L○○(○)NPT	<b>J11</b>	Insert (Threading / Previous description)
TNN ○○E%L○○PT	<b>J11</b>	Insert (Threading / Previous description)
TNN ○○E%L○○PT-TS	<b>J11</b>	Insert (Threading / Previous description)
TNN ○○E%L○○UN	<b>J9</b>	Insert (Threading / Previous description)
TNN ○○E%L○○W	<b>J9</b>	Insert (Threading / Previous description)

Description	Page	Category
TNN ○○E%L○○W-TS	<b>J9</b>	Insert (Threading / Previous description)
TNN ○○E%L○○M	<b>J7</b>	Insert (Threading / Previous description)
TNN ○○E%L○○M-TS	<b>J7</b>	Insert (Threading / Previous description)
TNN ○○E%L○○M-TR	<b>J15</b>	Insert (Threading / Previous description)
TNN ○○E%L○○(○)	<b>J13, J15</b>	Insert (Threading / Previous description)
TNN ○○E%L○○(○)-TS	<b>J13</b>	Insert (Threading / Previous description)
TNW-32	<b>J16, N9, P12</b>	Spare Parts (Shim)
TPET ○○○○○○(○)F%-USF	<b>B65</b>	Insert (Turning)
TPET ○○○○○○(○)MF%-USF	<b>B65</b>	Insert (Turning)
TPET ○○○○○○(○)M%-FSF	<b>B65</b>	Insert (Turning)
TPET ○○○○○○(○)%L-FSF	<b>B65</b>	Insert (Turning)
TPGB ○○○○○○(○)	<b>B65, C14, C24, J28</b>	Insert (Turning / Threading)
TPGB ○○○○○○ME	<b>C14</b>	Insert (Turning) / Previous Description
TPGB ○○○○○○ME-T	<b>C14</b>	Insert (Turning) / Previous Description
TPGB ○○○○○○NE	<b>C24</b>	Insert (Turning)
TPGB ○○○○○○SE	<b>C14, C23</b>	Insert (Turning)
TPGB ○○○○○○SE-T	<b>C14</b>	Insert (Turning) / Previous Description
TPGB ○○○○○○S○○○○○MES	<b>C14</b>	Insert (Turning)
TPGB ○○○○○○S○○○○○MET	<b>C14</b>	Insert (Turning)
TPGB ○○○○○○S○○○○○SET	<b>C14</b>	Insert (Turning)
TPGB ○○○○○○T○○○○○	<b>C14</b>	Insert (Turning)
TPGB ○○○○○○T○○○○○ME	<b>C14</b>	Insert (Turning)
TPGB ○○○○○○T○○○○○SE	<b>C14</b>	Insert (Turning)
TPGH ○○○○○○M%L	<b>B64</b>	Insert (Turning)
TPGH ○○○○○○M%-H	<b>B64</b>	Insert (Turning)
TPGH ○○○○○○%L	<b>B64</b>	Insert (Turning)
TPGH ○○○○○○%L-H	<b>B64</b>	Insert (Turning)
TPGN ○○○○○○	<b>B67, B86, C16, C26, M13, M22</b>	Insert (Turning / Milling)
TPGN ○○○○○○ME	<b>C16</b>	Insert (Turning) / Previous Description
TPGN ○○○○○○NE	<b>C26, M22</b>	Insert (Turning / Milling)
TPGN ○○○○○○SE	<b>C16, C26</b>	Insert (Turning)
TPGN ○○○○○○SE-T	<b>C16</b>	Insert (Turning) / Previous Description
TPGN ○○○○○○S○○○○○	<b>B86</b>	Insert (Turning)
TPGN ○○○○○○S○○○○○SET	<b>C16</b>	Insert (Turning)
TPGN ○○○○○○T○○○○○	<b>B86, C16, M22</b>	Insert (Turning / Milling)
TPGN ○○○○○○T○○○○○ME	<b>C16</b>	Insert (Turning)
TPGN ○○○○○○T○○○○○SE	<b>C16</b>	Insert (Turning)
TPGR ○○○○○○%L-A/B/C	<b>B67</b>	Insert (Turning)
TPGR ○○○○○○%L-F	<b>B66</b>	Insert (Turning)
TPGT ○○○○○○CF	<b>B63</b>	Insert (Turning)
TPGT ○○○○○○M-CF	<b>B63</b>	Insert (Turning)
TPGT ○○○○○○MP-CF	<b>B63</b>	Insert (Turning)
TPGW ○○○○○○ME	<b>C14</b>	Insert (Turning) / Previous Description
TPGW ○○○○○○ME-T	<b>C14</b>	Insert (Turning) / Previous Description
TPGW ○○○○○○SE	<b>C14</b>	Insert (Turning) / Previous Description
TPGW ○○○○○○SE-T	<b>C14</b>	Insert (Turning) / Previous Description
TPGW ○○○○○○S○○○○○MET	<b>C14</b>	Insert (Turning)
TPGW ○○○○○○S○○○○○SET	<b>C14</b>	Insert (Turning)
TPGW ○○○○○○T○○○○○ME	<b>C14</b>	Insert (Turning)
TPGW ○○○○○○T○○○○○SE	<b>C14</b>	Insert (Turning)
TPKN ○○○○PDR	<b>M13</b>	Insert (Milling)
TPKN ○○○○PDTR	<b>M13</b>	Insert (Milling)
TPKR ○○○○PDER-S	<b>M13</b>	Insert (Milling)
TPMH ○○○○○○	<b>C24</b>	Insert (Turning)
TPMH ○○○○○○NE	<b>C24</b>	Insert (Turning)
TPMH ○○○○○○%L-NE	<b>C25</b>	Insert (Turning)
TPMH ○○○○○○SE	<b>C24</b>	Insert (Turning)
TPMN ○○○○○○	<b>B67, M13</b>	Insert (Turning / Milling)
TPMR ○○○○PDER-H	<b>M13</b>	Insert (Milling)
TPMR ○○○○○○	<b>B66</b>	Insert (Turning)
TPMR ○○○○○○DP	<b>B66</b>	Insert (Turning)
TPMR ○○○○○○G	<b>B66</b>	Insert (Turning)
TPMR ○○○○○○GP	<b>B66</b>	Insert (Turning)
TPMR ○○○○○○HQ	<b>B66</b>	Insert (Turning)
TPMT ○○○○○○GP	<b>B63</b>	Insert (Turning)
TPMT ○○○○○○HQ	<b>B63</b>	Insert (Turning)
TPMT ○○○○○○XP	<b>B63</b>	Insert (Turning)
TPMT ○○○○○○XQ	<b>B63</b>	Insert (Turning)
TS-3S	<b>D17, P7</b>	Spare Parts (Lock Pin)
TT 43E%L○○M	<b>J22</b>	Insert (Threading)
TT ○○%L○○○○	<b>J22, J23</b>	Insert (Threading)
TT-15	<b>M25, M55, P18</b>	Spare Parts (Trolox Wrench / T-sharp type)

# Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
TT-15L	<b>M125, M127</b>	Spare Parts (Trox Wrench / T-sharp type)
TT-25	<b>M144, P18</b>	Spare Parts (Trox Wrench / T-sharp type)
TT-25L	<b>M43, M87, M90, M91, P18</b>	Spare Parts (Trox Wrench / T-sharp type)
TT-30	<b>M144, P18</b>	Spare Parts (Trox Wrench / T-sharp type)
TTC-20	<b>M30, M34, P18</b>	Spare Parts (Trox Wrench / T-sharp type)
TTC-25	<b>M32, M58, P18</b>	Spare Parts (Trox Wrench / T-sharp type)
TTX 32R○○○○(○)	<b>J21</b>	Insert (Threading)
TTX 32R○○○○(○)S	<b>J21</b>	Insert (Threading)
TWBR ○○○○○-○○○	<b>F28</b>	Twin Bars (Turning)
TWBTR ○○○○○-○○○	<b>F29</b>	Twin Bars (Turning)
TWFGL ○○○	<b>G70</b>	Twin Bars (Grooving)
TWFGTR ○○○	<b>G71</b>	Twin Bars (Grooving)

## V

VBET ○○○○○(○)M%-F	<b>B68</b>	Insert (Turning)
VBET ○○○○○(○)M%-FSF	<b>B68</b>	Insert (Turning)
VBET ○○○○○(○)M%-FSF	<b>B68</b>	Insert (Turning)
VBET ○○○○○(○)M%-Y	<b>B69</b>	Insert (Turning)
VBGT ○○○○○(○)M%-F	<b>B68</b>	Insert (Turning)
VBGT ○○○○○(○)M%-Y	<b>B69</b>	Insert (Turning)
VBGT ○○○○○(○)M%-F	<b>B68</b>	Insert (Turning)
VBGT ○○○○○(○)M%-Y	<b>B69</b>	Insert (Turning)
VBGW ○○○○○ME	<b>C15</b>	Insert (Turning) / Previous Description
VBGW ○○○○○ME-T	<b>C15</b>	Insert (Turning) / Previous Description
VBGW ○○○○○SE	<b>C15</b>	Insert (Turning) / Previous Description
VBGW ○○○○○SE-T	<b>C15</b>	Insert (Turning) / Previous Description
VBGW ○○○○○S○○○○MES	<b>C15</b>	Insert (Turning)
VBGW ○○○○○S○○○○MET	<b>C15</b>	Insert (Turning)
VBGW ○○○○○S○○○○SET	<b>C15</b>	Insert (Turning)
VBGW ○○○○○T○○○○ME	<b>C15</b>	Insert (Turning)
VBGW ○○○○○T○○○○SE	<b>C15</b>	Insert (Turning)
VBMT ○○○○○	<b>C25</b>	Insert (Turning)
VBMT ○○○○○GP	<b>B68</b>	Insert (Turning)
VBMT ○○○○○HQ	<b>B68</b>	Insert (Turning)
VBMT ○○○○○NE	<b>C25</b>	Insert (Turning)
VBMT ○○○○○SE	<b>C25</b>	Insert (Turning)
VBMT ○○○○○VF	<b>B68</b>	Insert (Turning)
VCGT ○○○○○AH	<b>B69</b>	Insert (Turning)
VCGT ○○○○○%-A3	<b>B69</b>	Insert (Turning)
VCGW ○○○○○ME	<b>C15</b>	Insert (Turning) / Previous Description
VCGW ○○○○○ME-T	<b>C15</b>	Insert (Turning) / Previous Description
VCGW ○○○○○SE	<b>C15</b>	Insert (Turning) / Previous Description
VCGW ○○○○○SE-T	<b>C15</b>	Insert (Turning) / Previous Description
VCGW ○○○○○S○○○○MET	<b>C15</b>	Insert (Turning)
VCGW ○○○○○S○○○○SET	<b>C15</b>	Insert (Turning)
VCGW ○○○○○T○○○○ME	<b>C15</b>	Insert (Turning)
VCGW ○○○○○T○○○○SE	<b>C15</b>	Insert (Turning)
VCMT ○○○○○	<b>C25</b>	Insert (Turning)
VCMT ○○○○○HQ	<b>B69</b>	Insert (Turning)
VCMT ○○○○○NE	<b>C25</b>	Insert (Turning)
VCMT ○○○○○SE	<b>C25</b>	Insert (Turning)
VCMT ○○○○○VF	<b>B69</b>	Insert (Turning)
VNBR ○○○○○(○)	<b>F23</b>	System Tip-bars (Boring)
VNBR ○○○○○(○)NB	<b>C30, F23</b>	System Tip-bars (Boring)
VNBR ○○○○○(○)S	<b>F22</b>	System Tip-bars (Boring)
VNBTR ○○○○○(○)	<b>F23</b>	System Tip-bars (Boring)
VNBXR ○○○○○(○)S	<b>F26</b>	System Tip-bars (Boring)
VNFR ○○○○○	<b>G68</b>	System Tip-bars (Grooving)
VNFR ○○○○○NB	<b>C30, G68</b>	System Tip-bars (Grooving)
VNGR ○○○○○	<b>G47</b>	System Tip-bars (Grooving)
VNGR ○○○○○NB	<b>C30, G47</b>	System Tip-bars (Grooving)
VNGA ○○○○○	<b>B37, B85, C10</b>	Insert (Turning)
VNGA ○○○○○ME	<b>C10</b>	Insert (Turning) / Previous Description
VNGA ○○○○○ME-T	<b>C10</b>	Insert (Turning) / Previous Description
VNGA ○○○○○SE	<b>C10</b>	Insert (Turning) / Previous Description
VNGA ○○○○○SE-T	<b>C10</b>	Insert (Turning) / Previous Description
VNGA ○○○○○S○○○○	<b>B85, C10</b>	Insert (Turning)
VNGA ○○○○○S○○○○ME	<b>C10</b>	Insert (Turning)
VNGA ○○○○○S○○○○MEH	<b>C10</b>	Insert (Turning)
VNGA ○○○○○S○○○○MEP	<b>C10</b>	Insert (Turning)
VNGA ○○○○○S○○○○MET	<b>C10</b>	Insert (Turning)
VNGA ○○○○○S○○○○SE	<b>C10</b>	Insert (Turning)

Description	Page	Category
VNGA ○○○○○S○○○○SET	<b>C10</b>	Insert (Turning)
VNGA ○○○○○T○○○○	<b>B85</b>	Insert (Turning)
VNGA ○○○○○T○○○○ME	<b>C10</b>	Insert (Turning)
VNGA ○○○○○T○○○○SE	<b>C10</b>	Insert (Turning)
VNGG ○○○○○%	<b>B37</b>	Insert (Turning)
VNMA ○○○○○	<b>B85</b>	Insert (Turning) / Previous Description
VNMA ○○○○○S○○○○	<b>B85</b>	Insert (Turning)
VNMG ○○○○○	<b>B36</b>	Insert (Turning)
VNMG ○○○○○DP	<b>B36</b>	Insert (Turning)
VNMG ○○○○○GP	<b>B36</b>	Insert (Turning)
VNMG ○○○○○GU	<b>B37</b>	Insert (Turning)
VNMG ○○○○○HQ	<b>B36</b>	Insert (Turning)
VNMG ○○○○○MQ	<b>B37</b>	Insert (Turning)
VNMG ○○○○○MS	<b>B37</b>	Insert (Turning)
VNMG ○○○○○MU	<b>B37</b>	Insert (Turning)
VNMG ○○○○○TN-V	<b>B36</b>	Insert (Turning)
VNMG ○○○○○VF	<b>B36</b>	Insert (Turning)
VNMM ○○○○○M	<b>C20</b>	Insert (Turning)
VNMM ○○○○○M-NE	<b>C20</b>	Insert (Turning)
VNMM ○○○○○M-SE	<b>C20</b>	Insert (Turning)
VNTR ○○○○○	<b>J27</b>	System Tip-bars (Threading)
VPET ○○○○○(○)F%-USF	<b>B71</b>	Insert (Turning)
VPET ○○○○○(○)M%-F	<b>B71</b>	Insert (Turning)
VPET ○○○○○(○)M%-FSF	<b>B71</b>	Insert (Turning)
VPET ○○○○○(○)MF%-J	<b>B71</b>	Insert (Turning)
VPET ○○○○○(○)MF%-U	<b>B71</b>	Insert (Turning)
VPET ○○○○○(○)MF%-USF	<b>B71</b>	Insert (Turning)
VPET ○○○○○(○)M%-FSF	<b>B71</b>	Insert (Turning)
VPGT ○○○○○CF	<b>B70</b>	Insert (Turning)
VPGT ○○○○○CK	<b>B70</b>	Insert (Turning)
VPGT ○○○○○M-CF	<b>B70</b>	Insert (Turning)
VPGT ○○○○○M-CK	<b>B70</b>	Insert (Turning)
VPGT ○○○○○MF-GF	<b>B70</b>	Insert (Turning)
VPGT ○○○○○MFP-GF	<b>B70</b>	Insert (Turning)
VPGT ○○○○○MP-CF	<b>B70</b>	Insert (Turning)
VPGT ○○○○○MP-CK	<b>B70</b>	Insert (Turning)

## W

W-6	<b>G20, G61, P18</b>	Spare Parts (Washer)
W-8	<b>G19, P18</b>	Spare Parts (Washer)
W6-14	<b>P18</b>	Spare Parts (Washer)
W6X17	<b>M34, P6</b>	Spare Parts (Screw)
W6X18	<b>M136, M137, P6</b>	Spare Parts (Wedge Lock Screw)
W6X20	<b>M136, M137, P6</b>	Spare Parts (Wedge Lock Screw)
W8X16	<b>M58, P6</b>	Spare Parts (Screw)
W8X18	<b>M59, P6</b>	Spare Parts (Screw)
W8X21	<b>M30, P6</b>	Spare Parts (Screw)
WB-5	<b>F89, P18</b>	Spare Parts (Washer)
WB-6	<b>F89, P18</b>	Spare Parts (Washer)
WB-8	<b>F89, P18</b>	Spare Parts (Washer)
WBET ○○○○○(○)M%-F	<b>B72</b>	Insert (Turning)
WBGT ○○○○○M%-CF	<b>B72</b>	Insert (Turning)
WBGT ○○○○○MP%-CF	<b>B72</b>	Insert (Turning)
WBGT ○○○○○(○)M%-F	<b>B72</b>	Insert (Turning)
WBGT ○○○○○(○)M%-F	<b>B72</b>	Insert (Turning)
WBGT ○○○○○(○)M%-F	<b>B72</b>	Insert (Turning)
WBGW ○○○○○%	<b>B72</b>	Insert (Turning)
WBGW ○○○○○%-SE	<b>C16</b>	Insert (Turning) / Previous Description
WBGW ○○○○○%-SE-T	<b>C16</b>	Insert (Turning) / Previous Description
WBGW ○○○○○S○○○○%-SET	<b>C16</b>	Insert (Turning)
WBGW ○○○○○T○○○○%-SE	<b>C16</b>	Insert (Turning)
WBMT ○○○○○L	<b>C25, C26</b>	Insert (Turning)
WBMT ○○○○○L-NE	<b>C25, C26</b>	Insert (Turning)
WBMT ○○○○○L-SE	<b>C25, C26</b>	Insert (Turning)
WBMT ○○○○○%-DP	<b>B72</b>	Insert (Turning)
WC- ○○	<b>M136, M137</b>	Spare Parts (Wedge)
WCMT ○○○○○	<b>K55, K57</b>	Insert (Drilling)
WCS-1N	<b>D15, N6, P14</b>	Spare Parts (Clamp Set)
WCS-8	<b>D20, F80, N7, P14</b>	Spare Parts (Clamp Set)
WDRC○(○)	<b>K7, K8, K9, K12, K13, K14, K15</b>	Spare Parts (Wrench / for "MagicDrill DRC")
WN-1	<b>D15, D20, N6, N7, P18</b>	Spare Parts (Shim Nut)

T

?

Index

Description	Page	Category
WNEU ○○○○○○EN-GL	M14	Insert (Milling)
WNGA ○○○○○○ME	C10	Insert (Turning) / Previous Description
WNGA ○○○○○○ME-T	C10	Insert (Turning) / Previous Description
WNGA ○○○○○○SE	C10	Insert (Turning) / Previous Description
WNGA ○○○○○○SE-T	C10	Insert (Turning) / Previous Description
WNGA ○○○○○○S○○○○○ME	C10	Insert (Turning)
WNGA ○○○○○○S○○○○○MET	C10	Insert (Turning)
WNGA ○○○○○○S○○○○○SE	C10	Insert (Turning)
WNGA ○○○○○○S○○○○○SET	C10	Insert (Turning)
WNGA ○○○○○○T○○○○○ME	C10	Insert (Turning)
WNGG ○○○○○○AH	B39	Insert (Turning)
WNGG ○○○○○○TK	B40	Insert (Turning)
WNGG ○○○○○○%L	B41	Insert (Turning)
WNGG ○○○○○○%L-S	B41	Insert (Turning)
WNMA ○○○○○○	B41	Insert (Turning)
WNMG ○○○○○○	B39	Insert (Turning)
WNMG ○○○○○○C	B41	Insert (Turning)
WNMG ○○○○○○CJ	B38	Insert (Turning)
WNMG ○○○○○○CQ	B38	Insert (Turning)
WNMG ○○○○○○CS	B38	Insert (Turning)
WNMG ○○○○○○GC	B41	Insert (Turning)
WNMG ○○○○○○GP	B38	Insert (Turning)
WNMG ○○○○○○GS	B39	Insert (Turning)
WNMG ○○○○○○GT	B39	Insert (Turning)
WNMG ○○○○○○GU	B40	Insert (Turning)
WNMG ○○○○○○HQ	B38	Insert (Turning)
WNMG ○○○○○○HS	B39	Insert (Turning)
WNMG ○○○○○○HT	B39	Insert (Turning)
WNMG ○○○○○○HU	B40	Insert (Turning)
WNMG ○○○○○○MQ	B40	Insert (Turning)
WNMG ○○○○○○MS	B41	Insert (Turning)
WNMG ○○○○○○MU	B41	Insert (Turning)
WNMG ○○○○○○PH	B41	Insert (Turning)
WNMG ○○○○○○PS	B39	Insert (Turning)
WNMG ○○○○○○PT	B39	Insert (Turning)
WNMG ○○○○○○TK	B40	Insert (Turning)
WNMG ○○○○○○WP	B38	Insert (Turning)
WNMG ○○○○○○WQ	B38	Insert (Turning)
WNMG ○○○○○○XP	B40	Insert (Turning)
WNMG ○○○○○○XQ	B40	Insert (Turning)
WNMG ○○○○○○XS	B40	Insert (Turning)
WNMG ○○○○○○ZS	B41	Insert (Turning)
WNMM ○○○○○○M	C20	Insert (Turning)
WNMM ○○○○○○M-NE	C20	Insert (Turning)
WNMM ○○○○○○M-SE	C20	Insert (Turning)
WNMU ○○○○○○EN-GH	M14	Insert (Milling)
WNMU ○○○○○○EN-GM	M14	Insert (Milling)
WNMU ○○○○○○EN-SM	M14	Insert (Milling)
WOF07R	M30	Spare Parts (Wedge)
WP-1S	D15, N6, P7	Spare Parts (Shim Pin)
WP5X11	F80, P7	Spare Parts (Shim Pin)
WP5X15	D20, N7, P7	Spare Parts (Shim Pin)
WPGT ○○○○○○M%-Y	B73	Insert (Turning)
WPGT ○○○○○○%-Y	B73	Insert (Turning)
WPGW ○○○○○○	B73	Insert (Turning)
WPMT ○○○○○○	C26	Insert (Turning)
WPMT ○○○○○○GP	B73	Insert (Turning)
WPMT ○○○○○○HQ	B73	Insert (Turning)
WPMT ○○○○○○NE	C26	Insert (Turning)
WPMT ○○○○○○SE	C26	Insert (Turning)
WSP-1	D15, N6, P18	Spare Parts (Spacer)
WTENN ○○○○□-○○N	D15	Toolholder (Turning)
WTJN%L ○○○○□-○○N	D15	Toolholder (Turning)
WTKN%L ○○○○□-○○N	D15	Toolholder (Turning)
WTN-33	D15, N6, P12	Spare Parts (Shim)
WTN-33-20	D15, P12	Spare Parts (Shim)
WWLN%L ○○○○□-○○	D20	Toolholder (Turning)
WWLN%L ○○○○B-○○E	F80	Boring Bar / Previous Description
WWN-42	D20, N7, P12	Spare Parts (Shim)
WWP-42	F80, P12	Spare Parts (Shim)
WWP-42-16	F80, P12	Spare Parts (Shim)
<b>Z</b>		
ZCMT ○○○○○○	K39	Insert (Drilling)
ZCMT ○○○○○○SP	K39	Insert (Drilling)

Description	Page	Category
ZCMT ○○○○○○SU	K39	Insert (Drilling)
ZXMT ○○○○○○GM	K24	Insert (Drilling)
ZXMT ○○○○○○GM-E	K24	Insert (Drilling)
ZXMT ○○○○○○GM-I	K24	Insert (Drilling)
ZXMT ○○○○○○GH	K24	Insert (Drilling)
ZXMT ○○○○○○GH-E	K24	Insert (Drilling)
ZXMT ○○○○○○SM	K24	Insert (Drilling)
ZXMT ○○○○○○SM-E	K24	Insert (Drilling)